







HIE TAKARI®




8/25 6BRLM


# 727 / 728 / 729

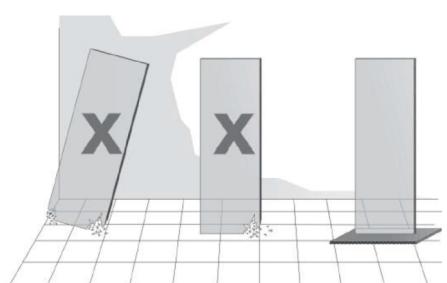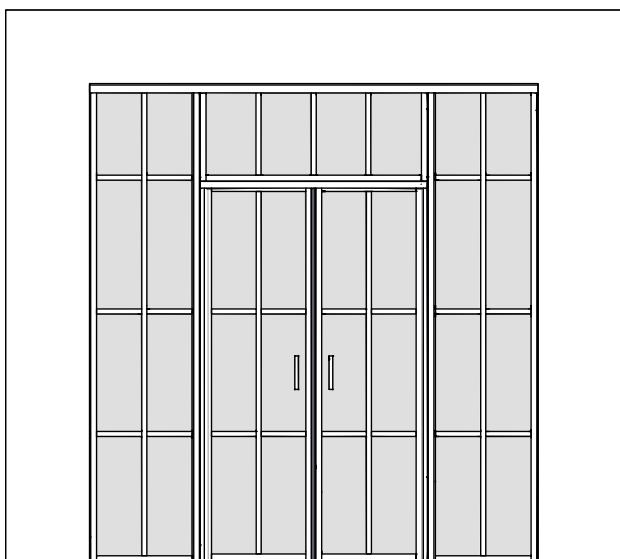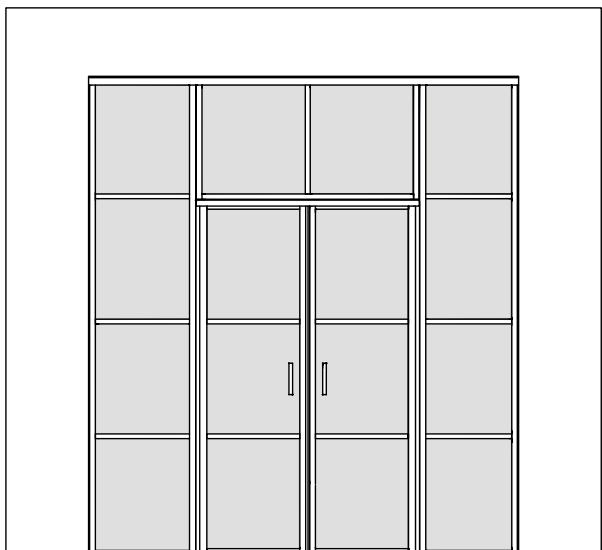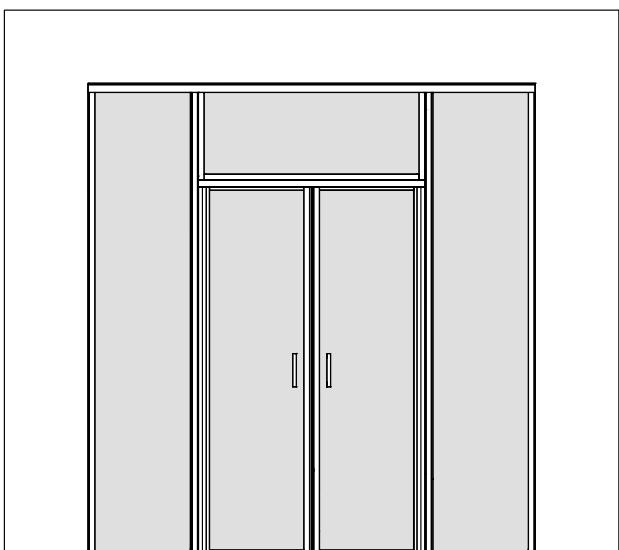


# Parts

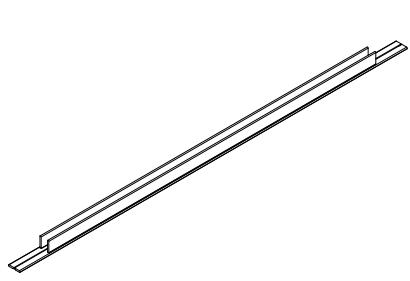

1. x2

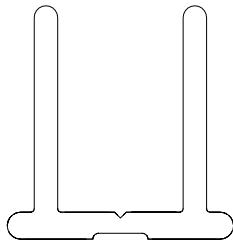


2. x2

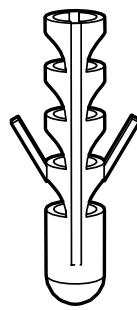

3. 6x30 mm  
x26




4. 4.5x45 mm  
x26

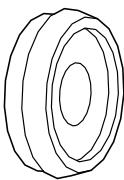


4/83 22RLM




4/83 24RLM

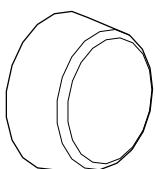


4/83 23RLM

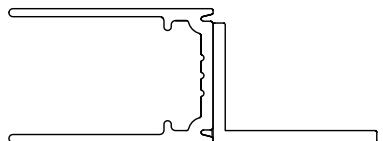




8. x2

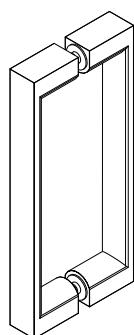

8/65 459LM

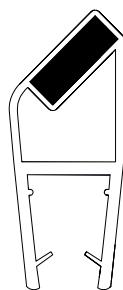

1/42 509L2

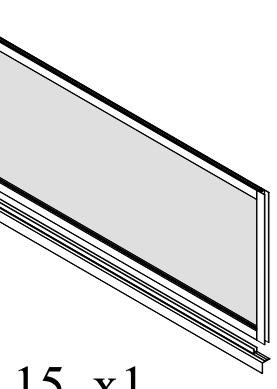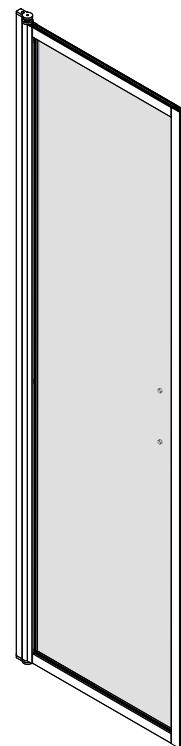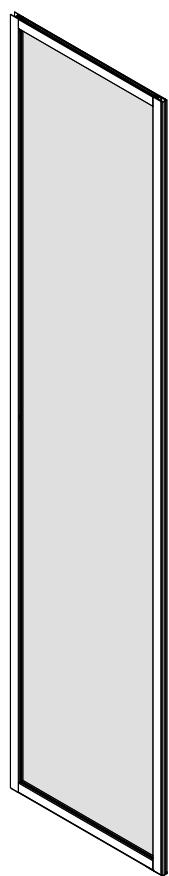

15. x1



1/42 T1RLM




12. x2


13. x2

11. x2


# Tools

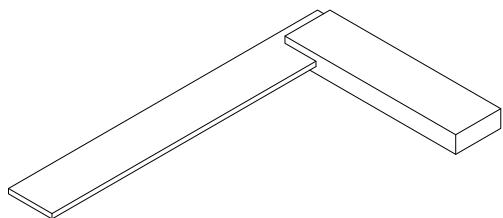

A

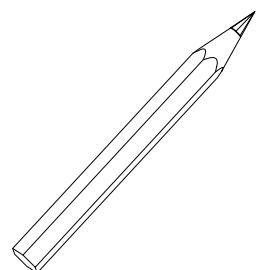


B

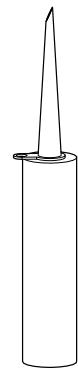


C – Glue  
D – Silicone




E

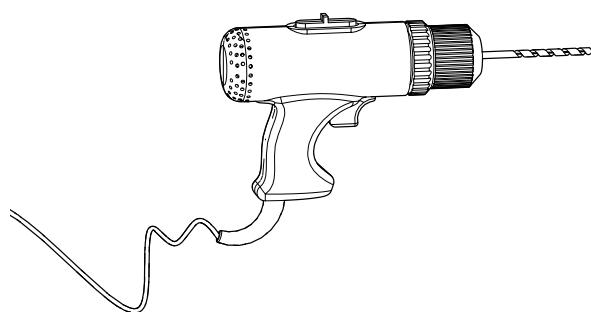


$\varnothing 6\text{ mm}$   
F

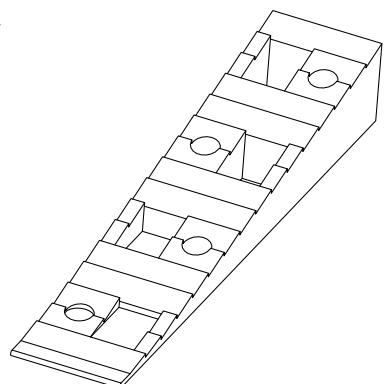

G

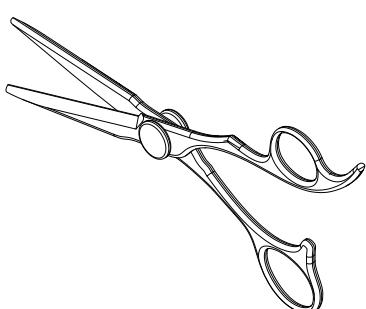


H

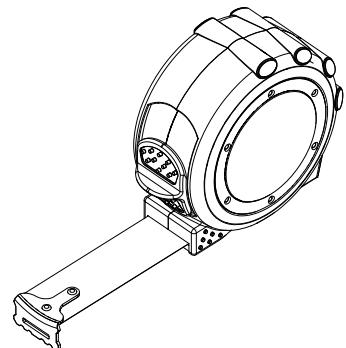


I


1/3

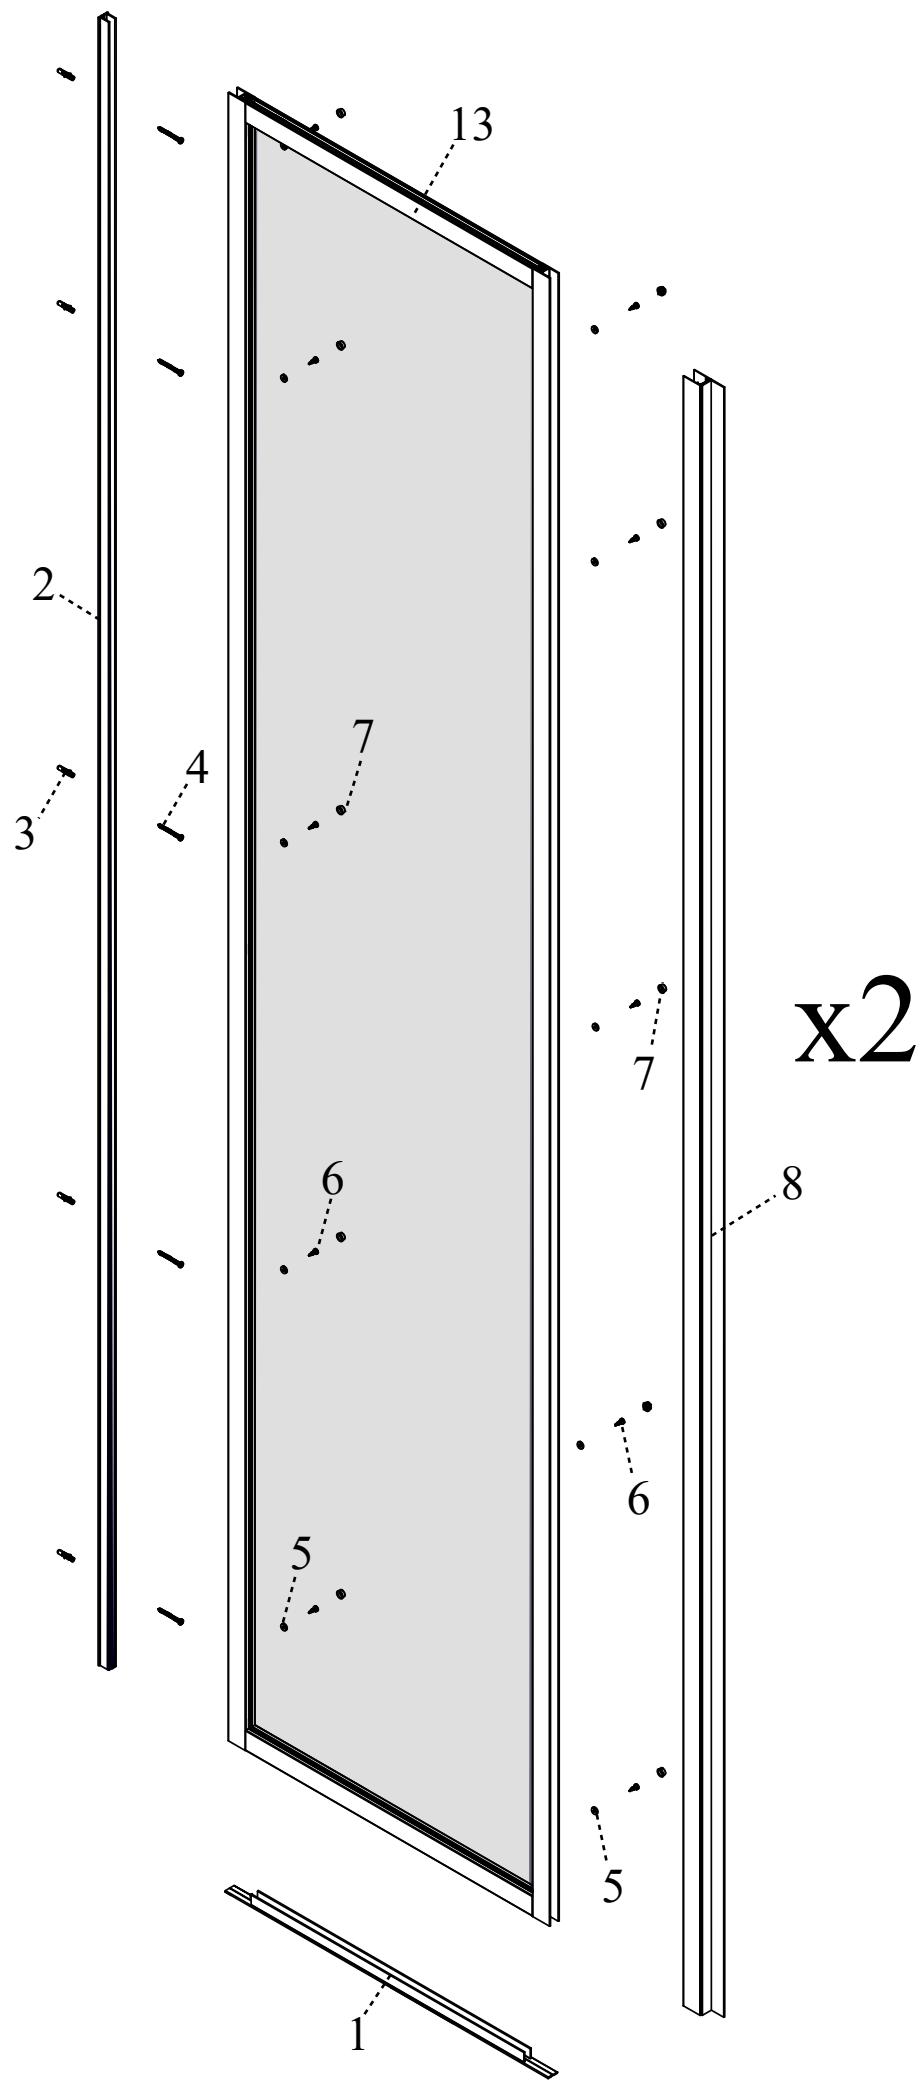


1

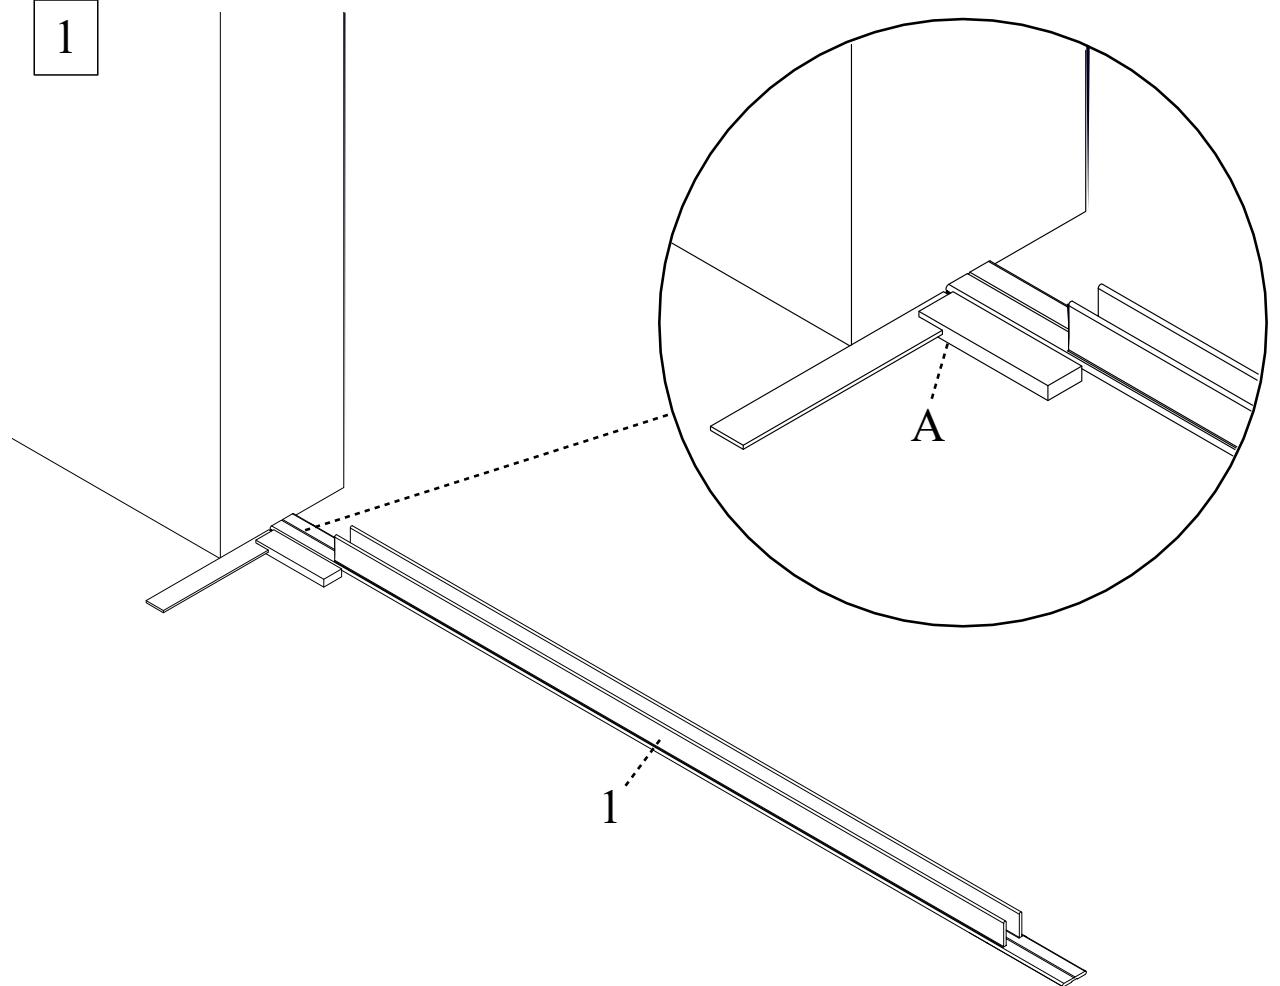


2

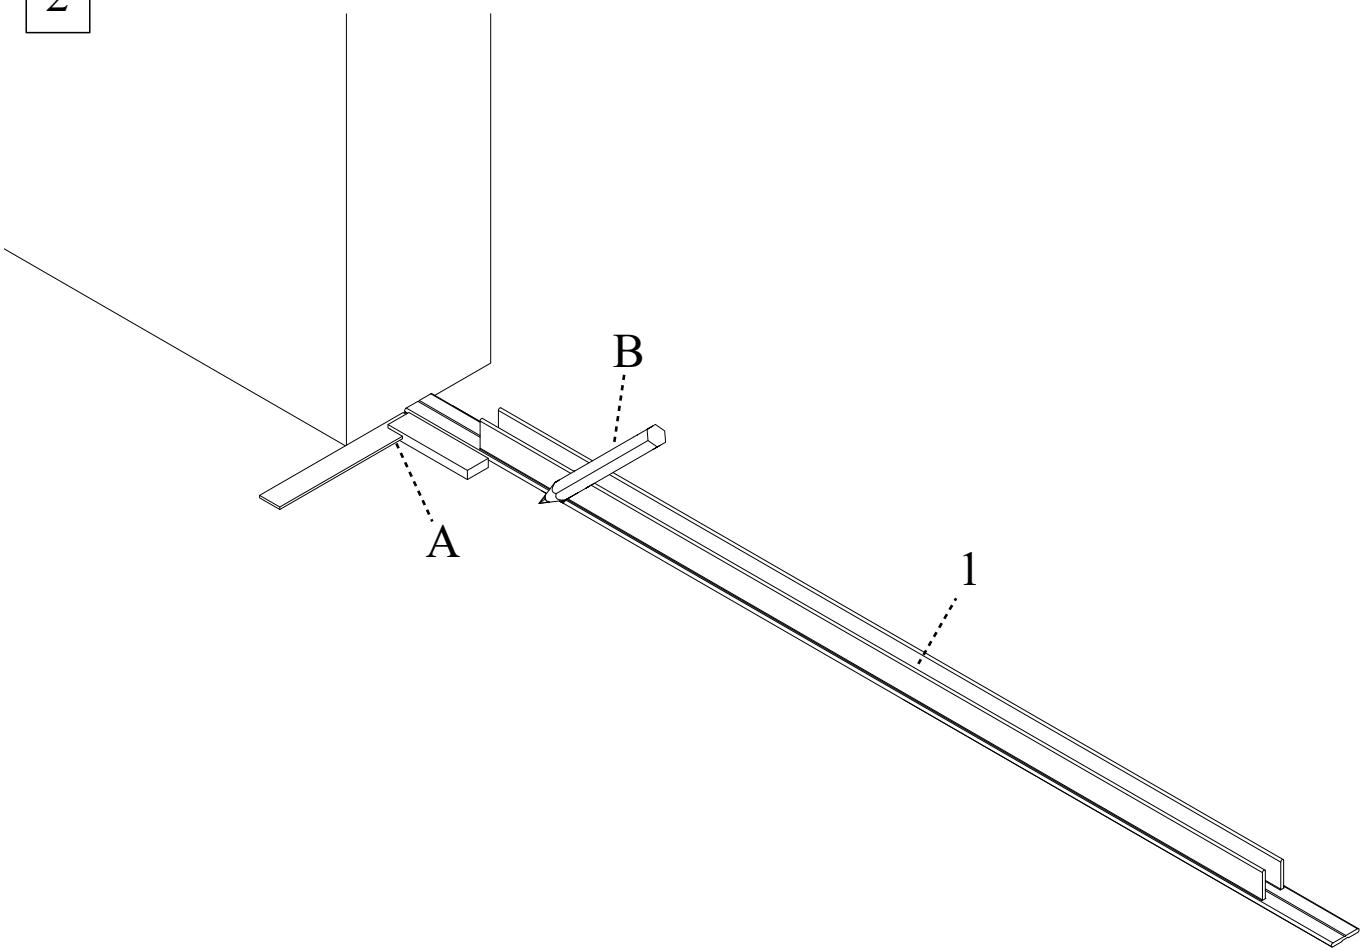

3

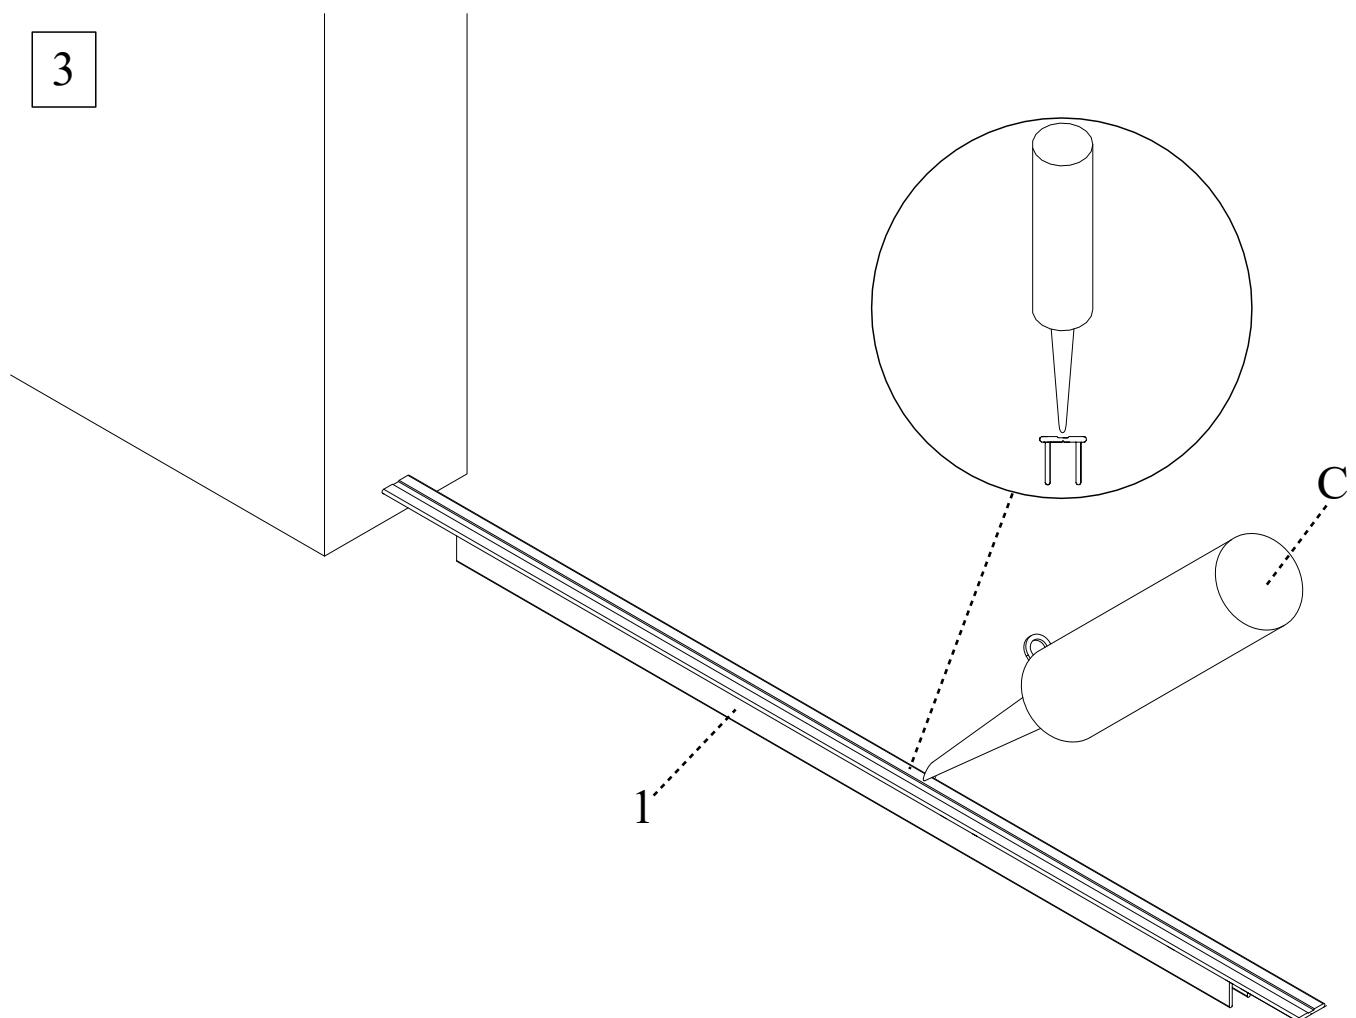


4

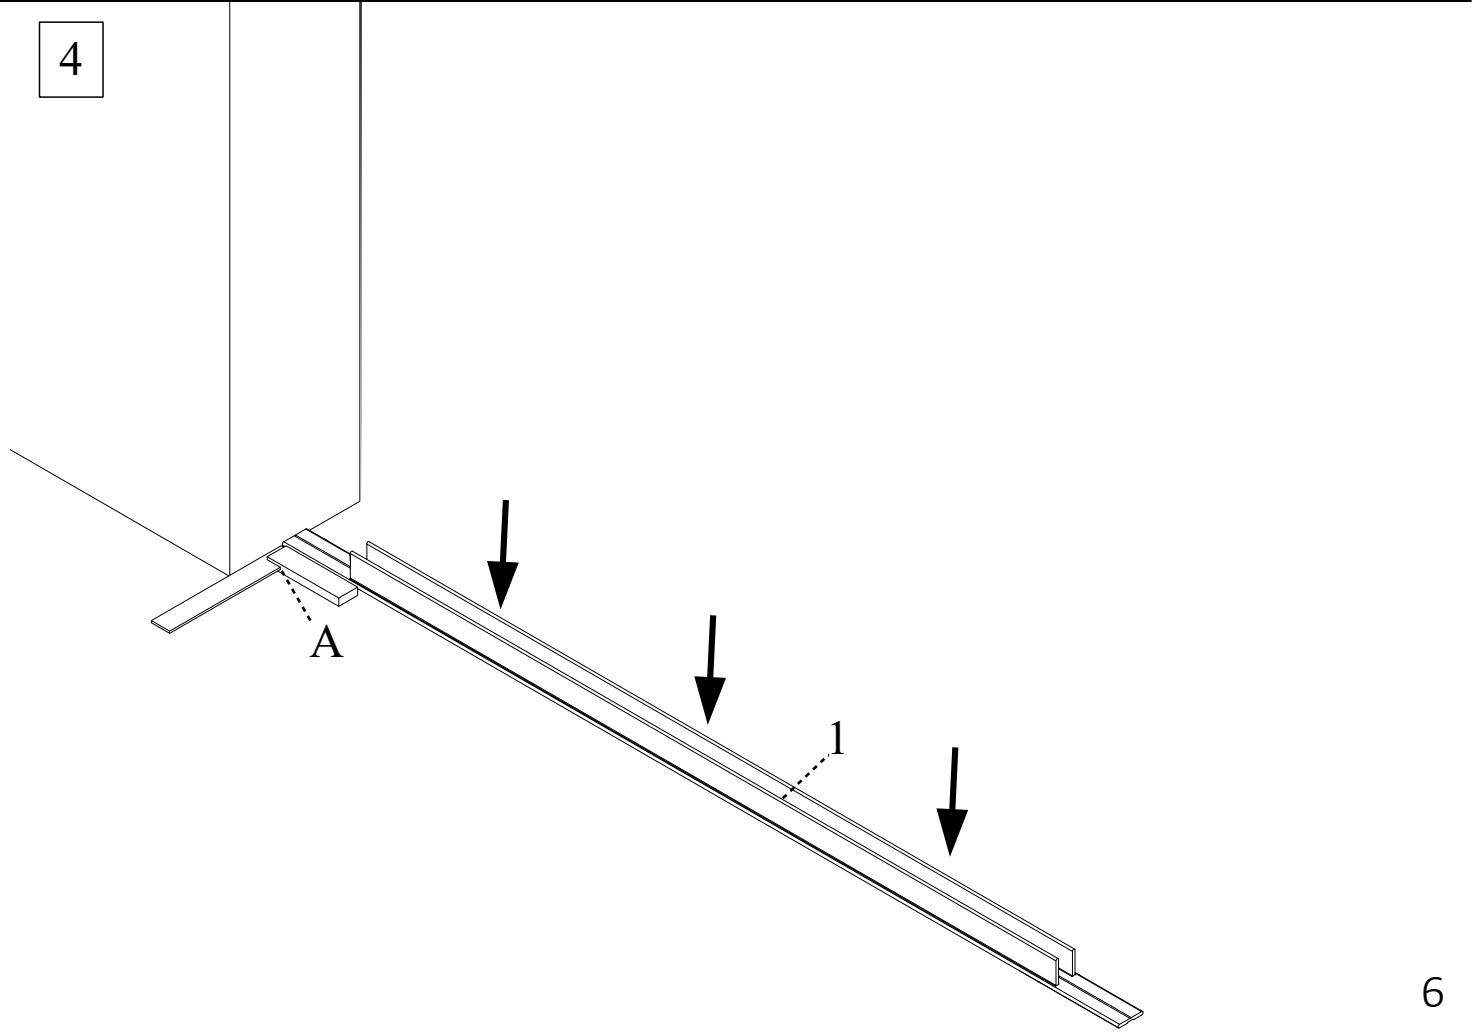


6





5



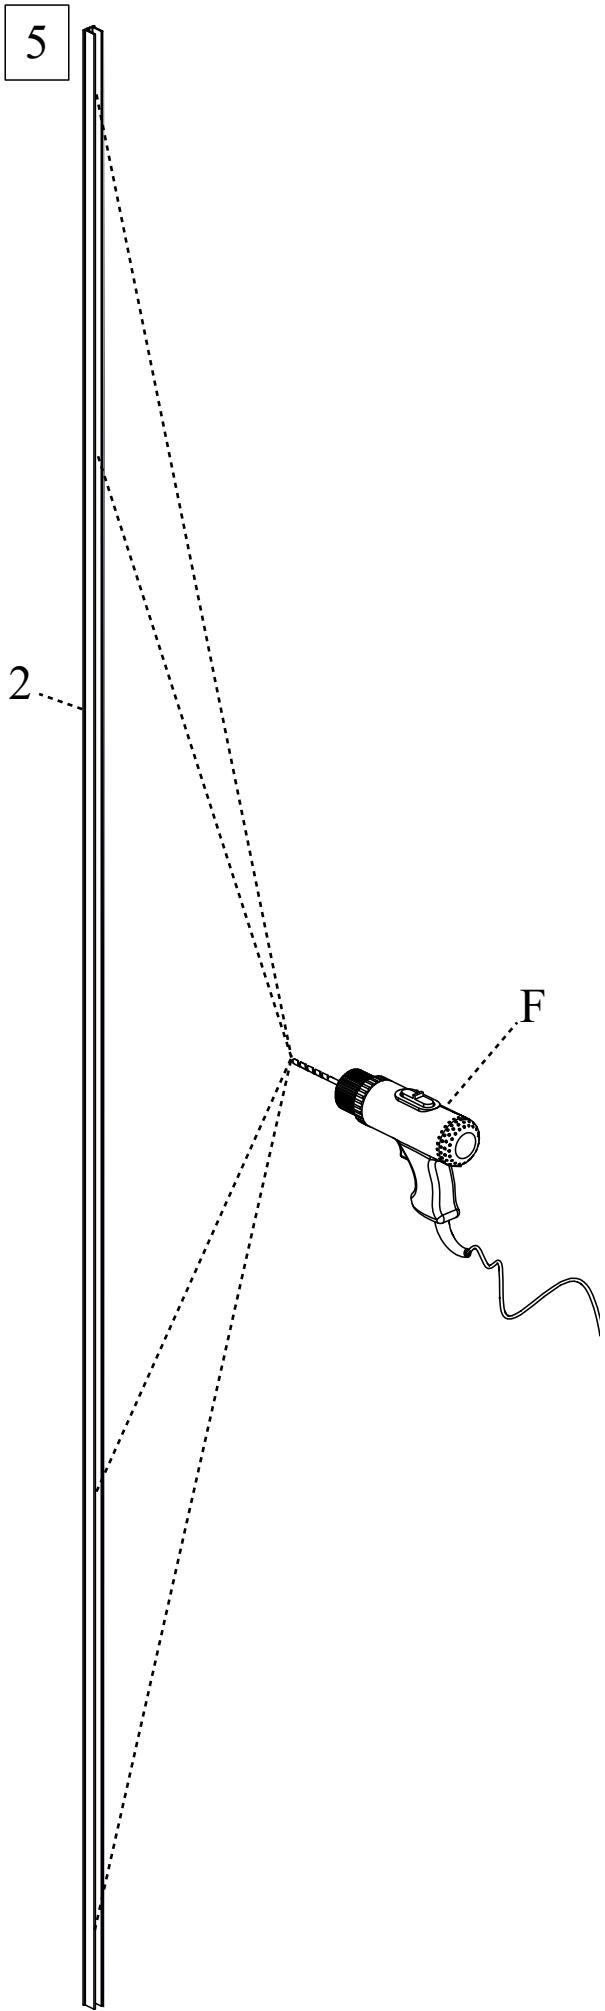



6

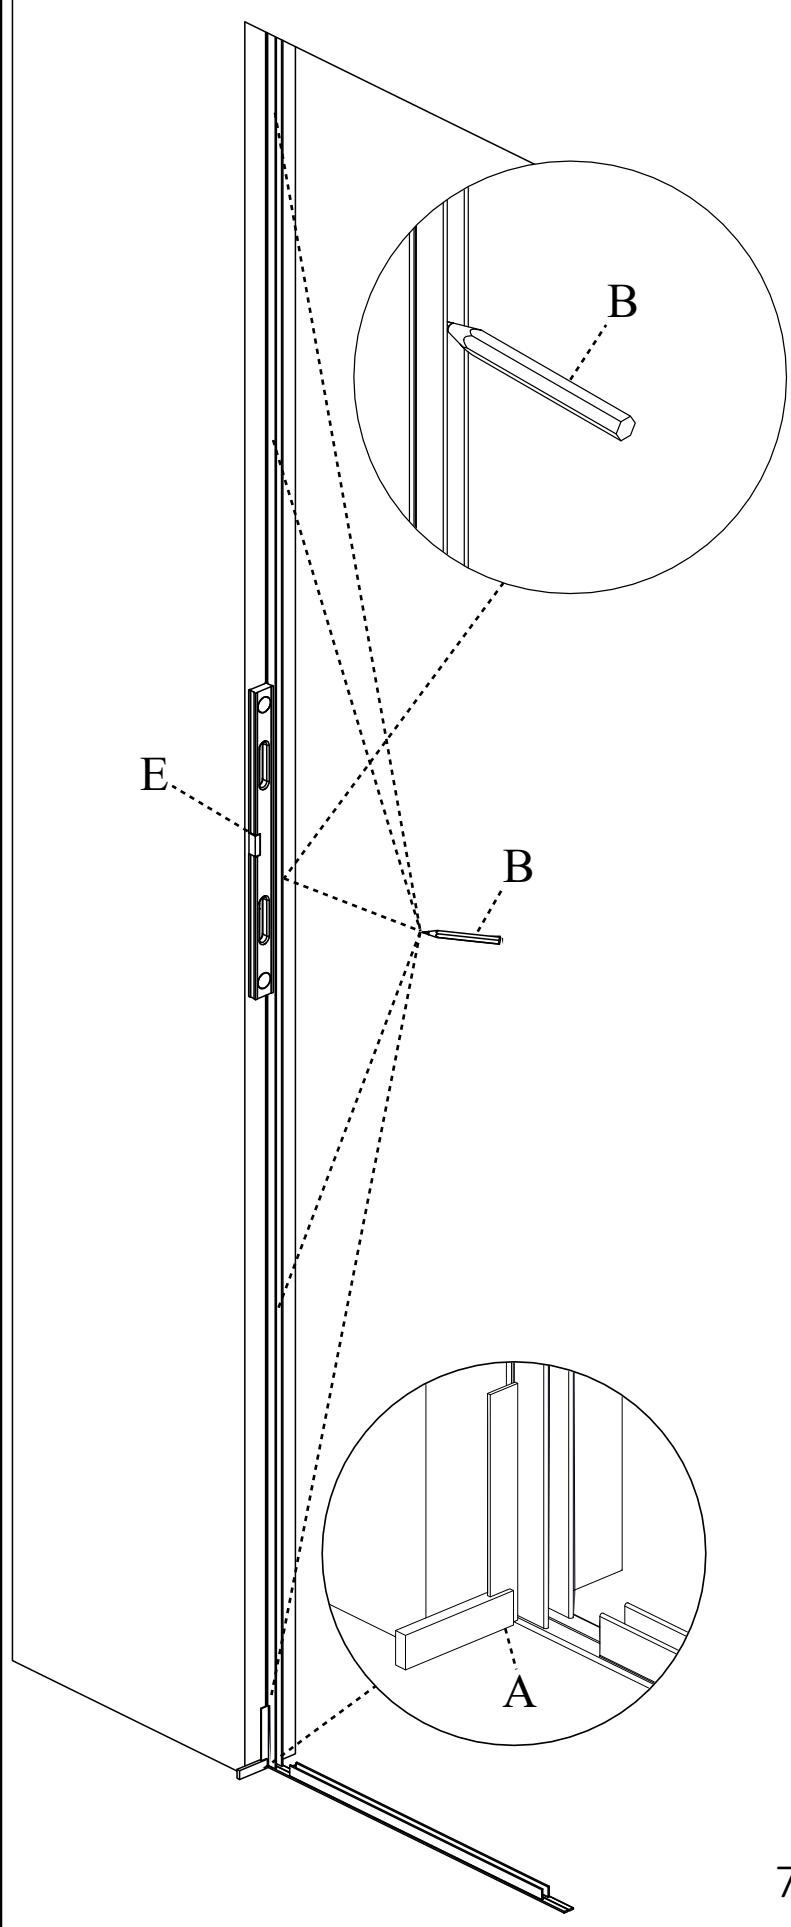


7

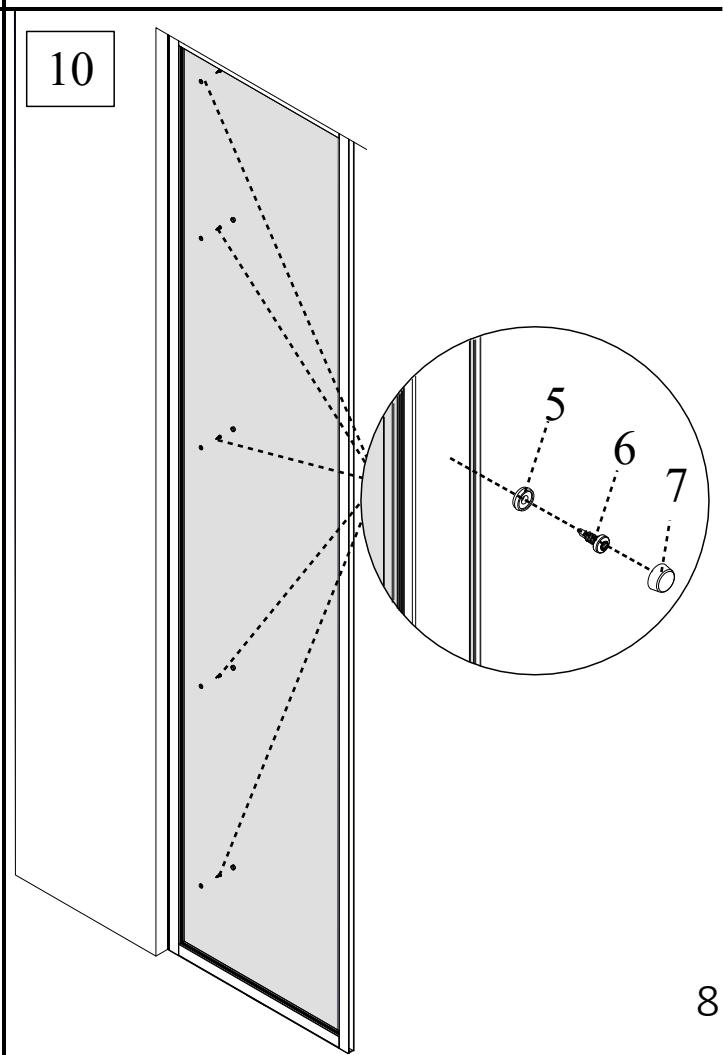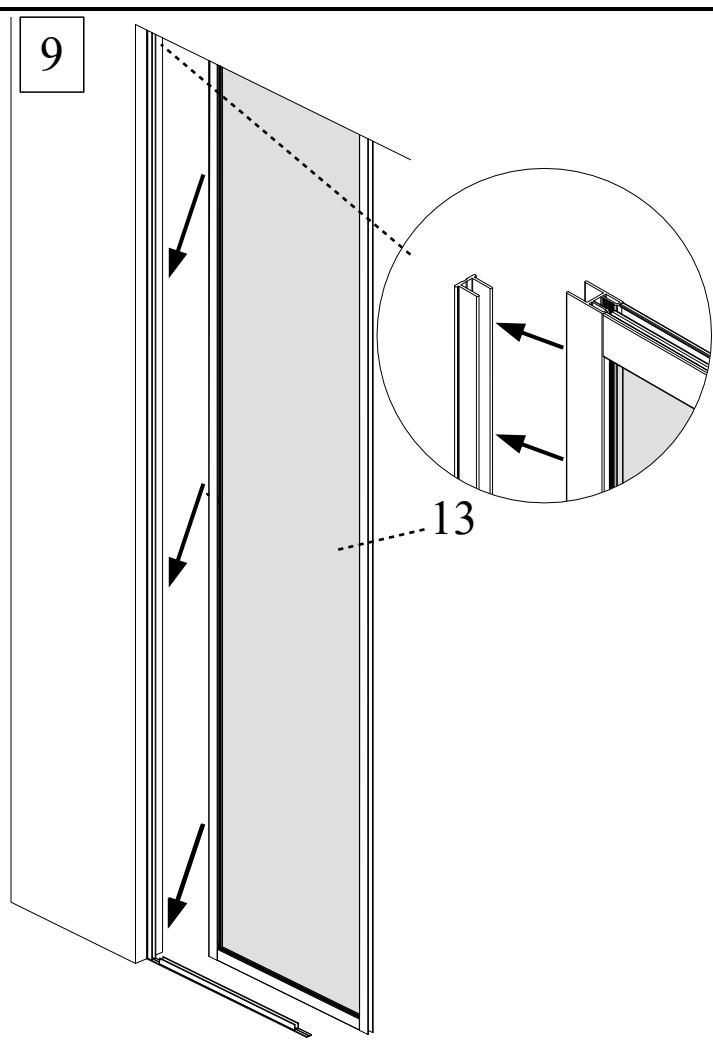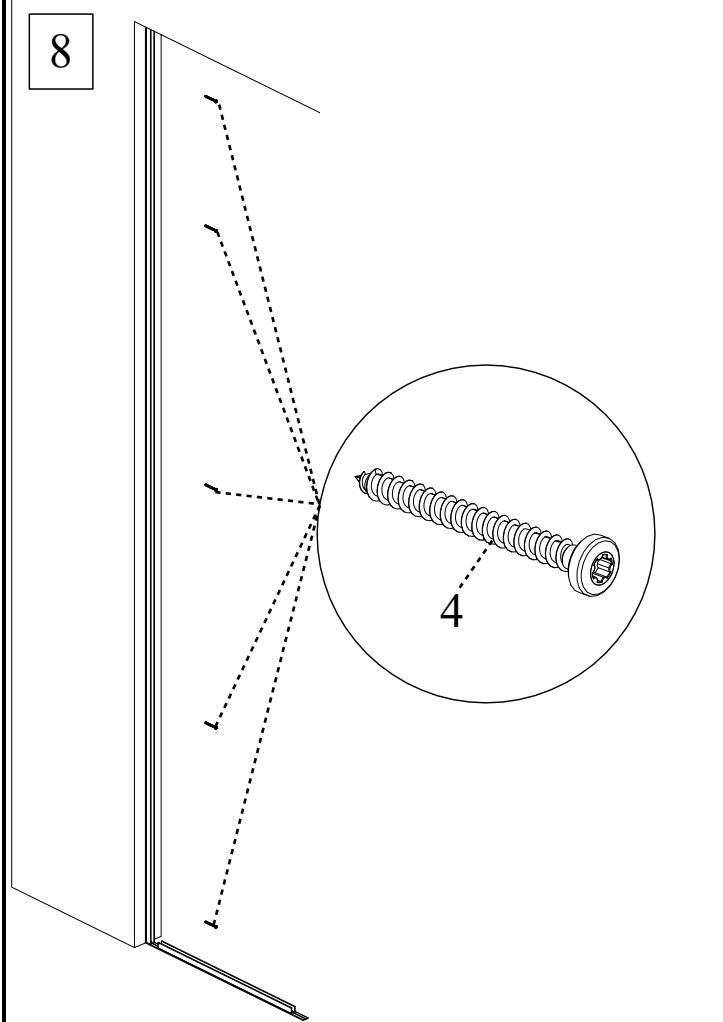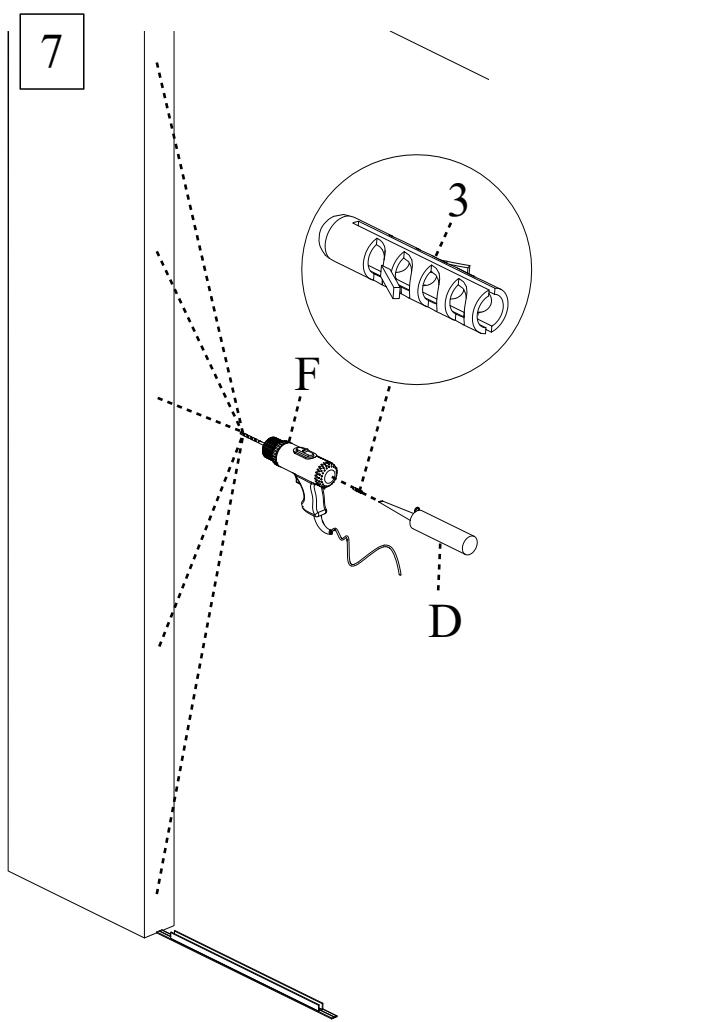

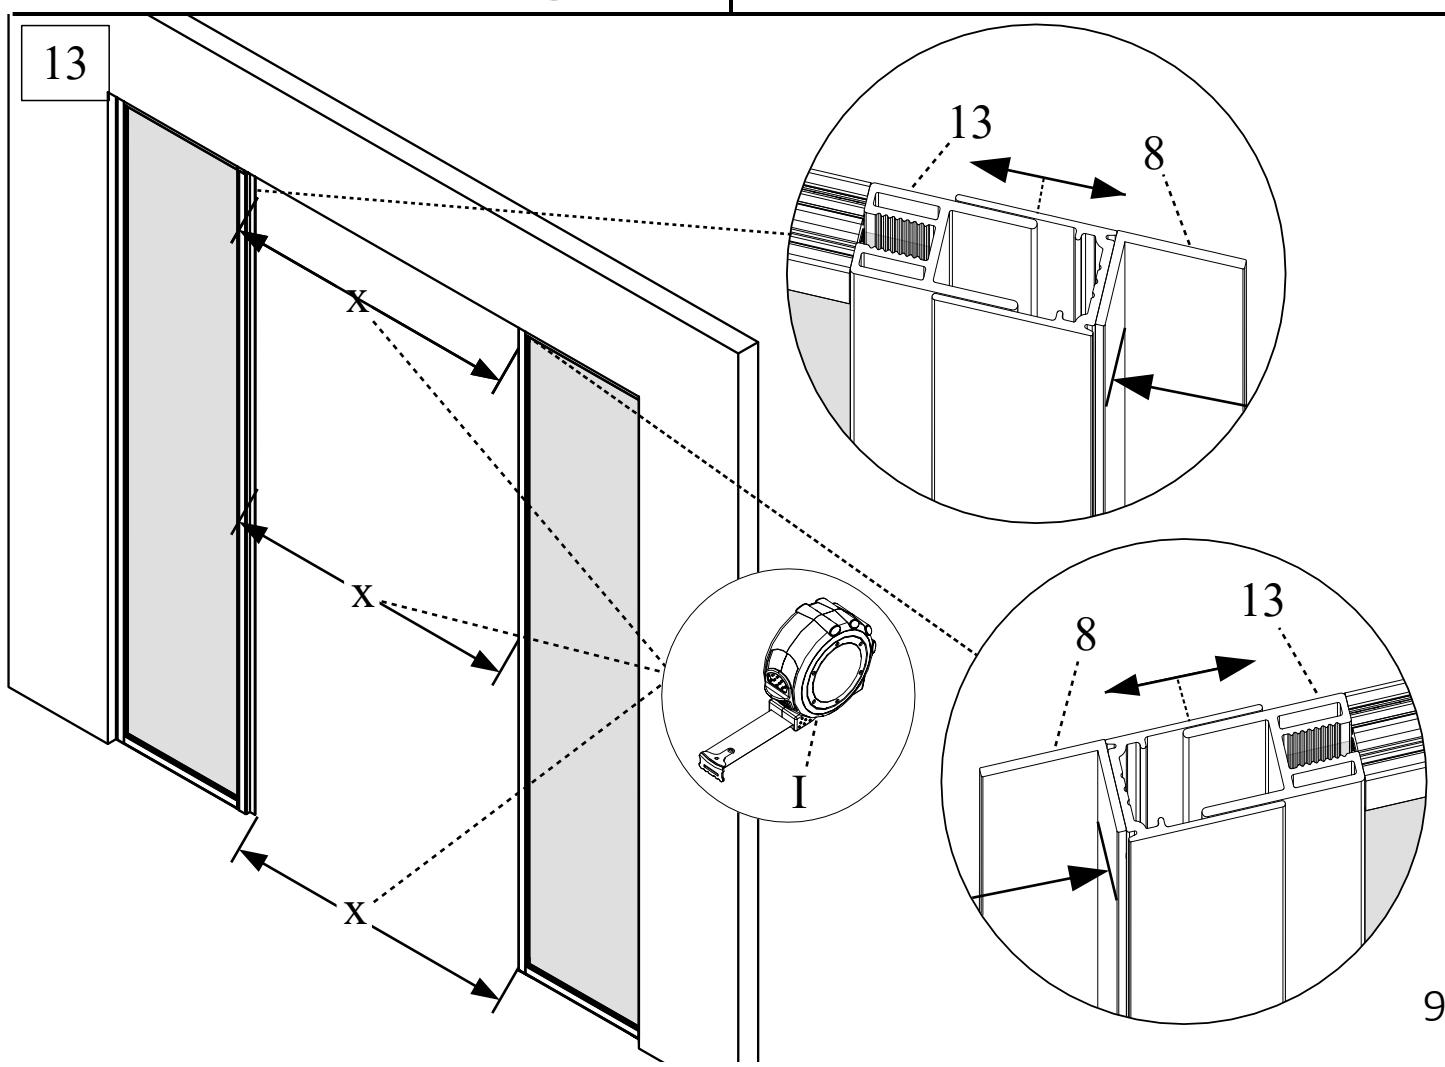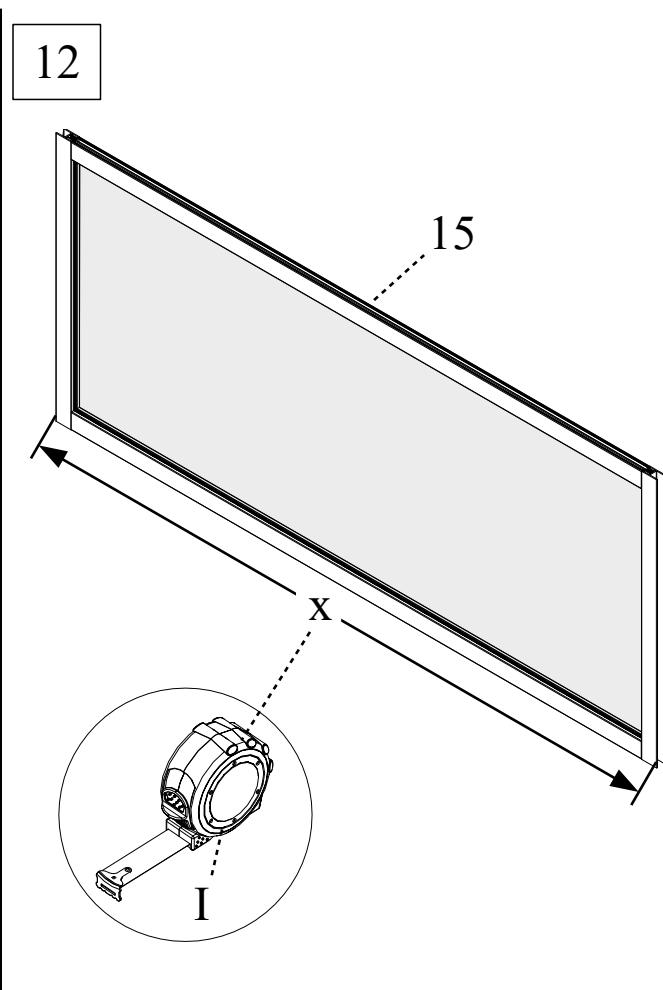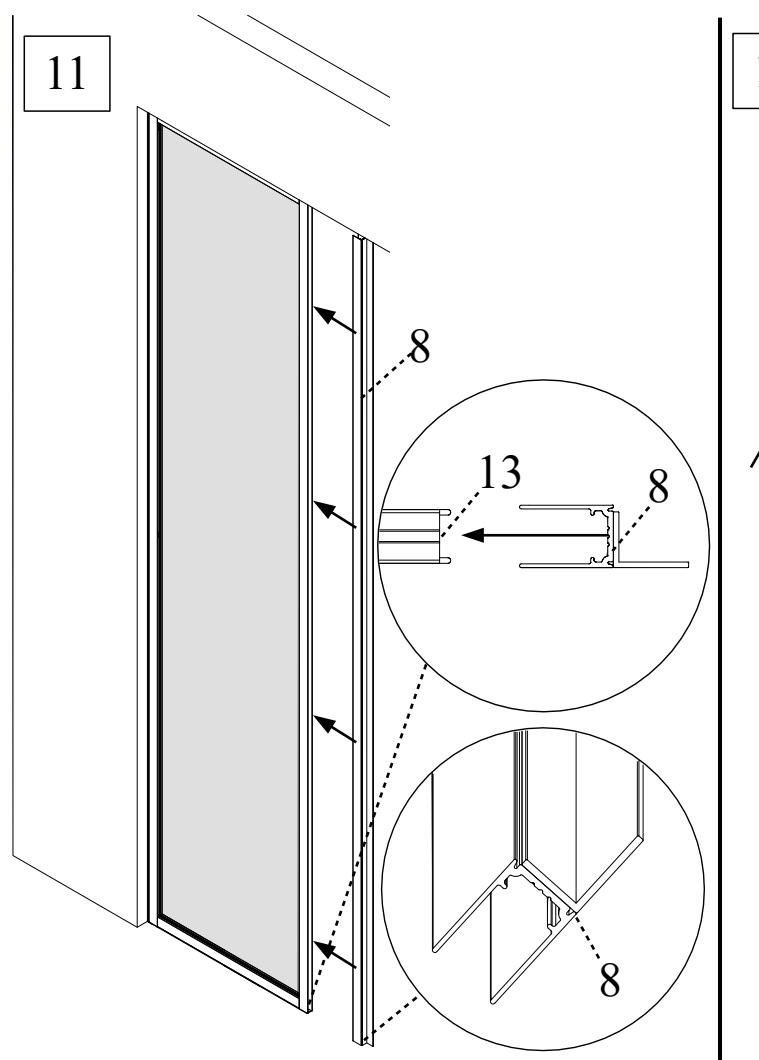


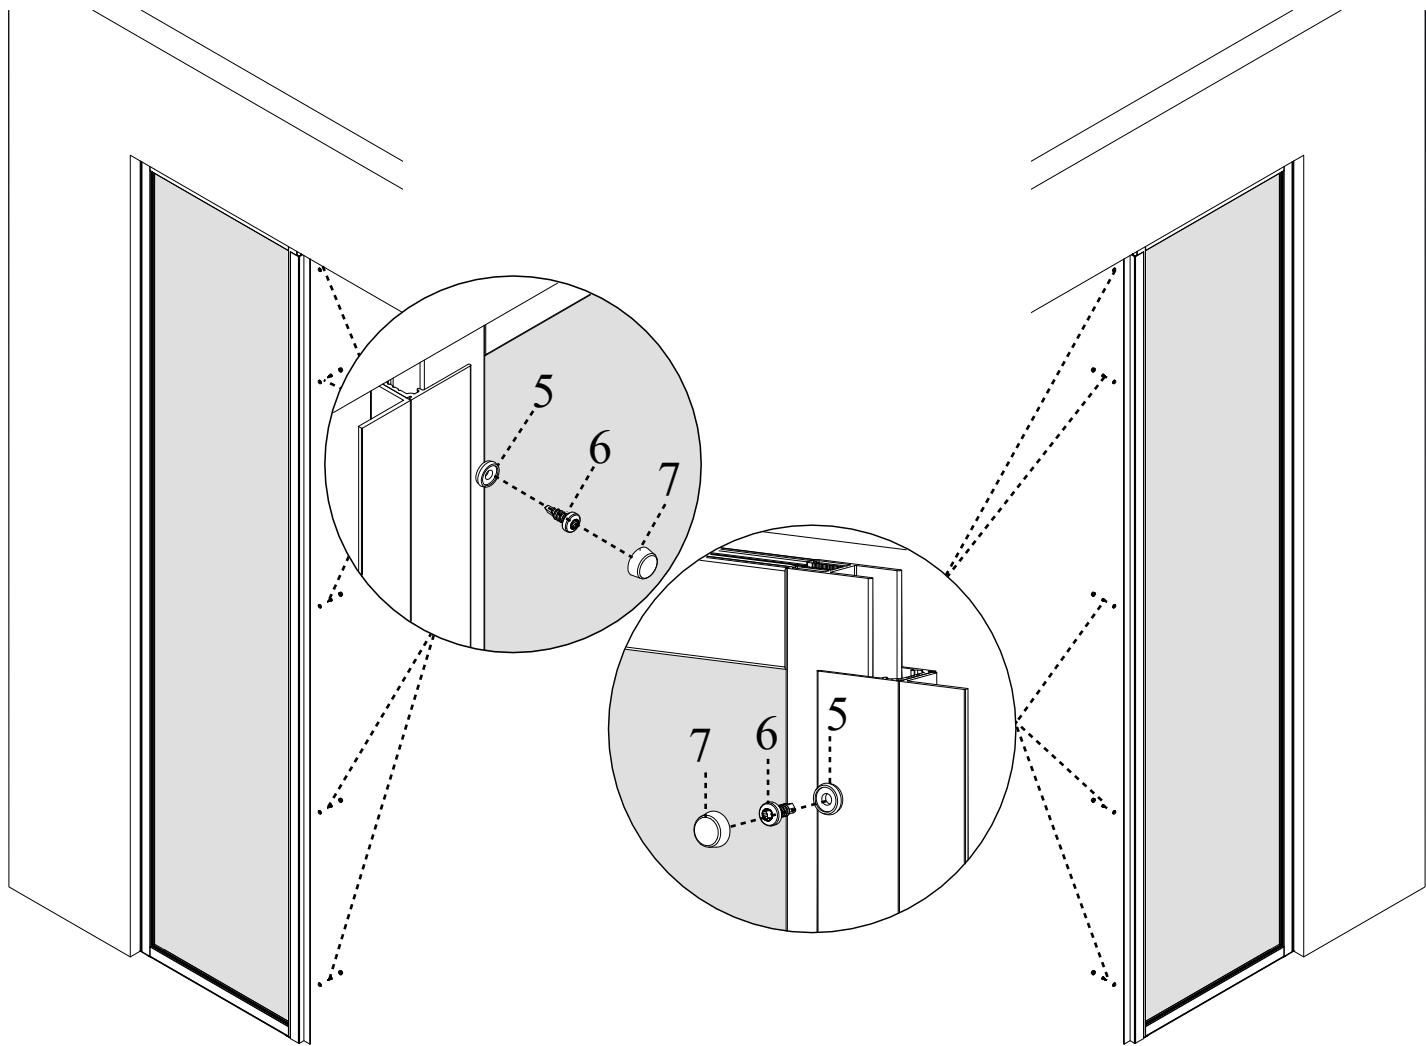


2/3

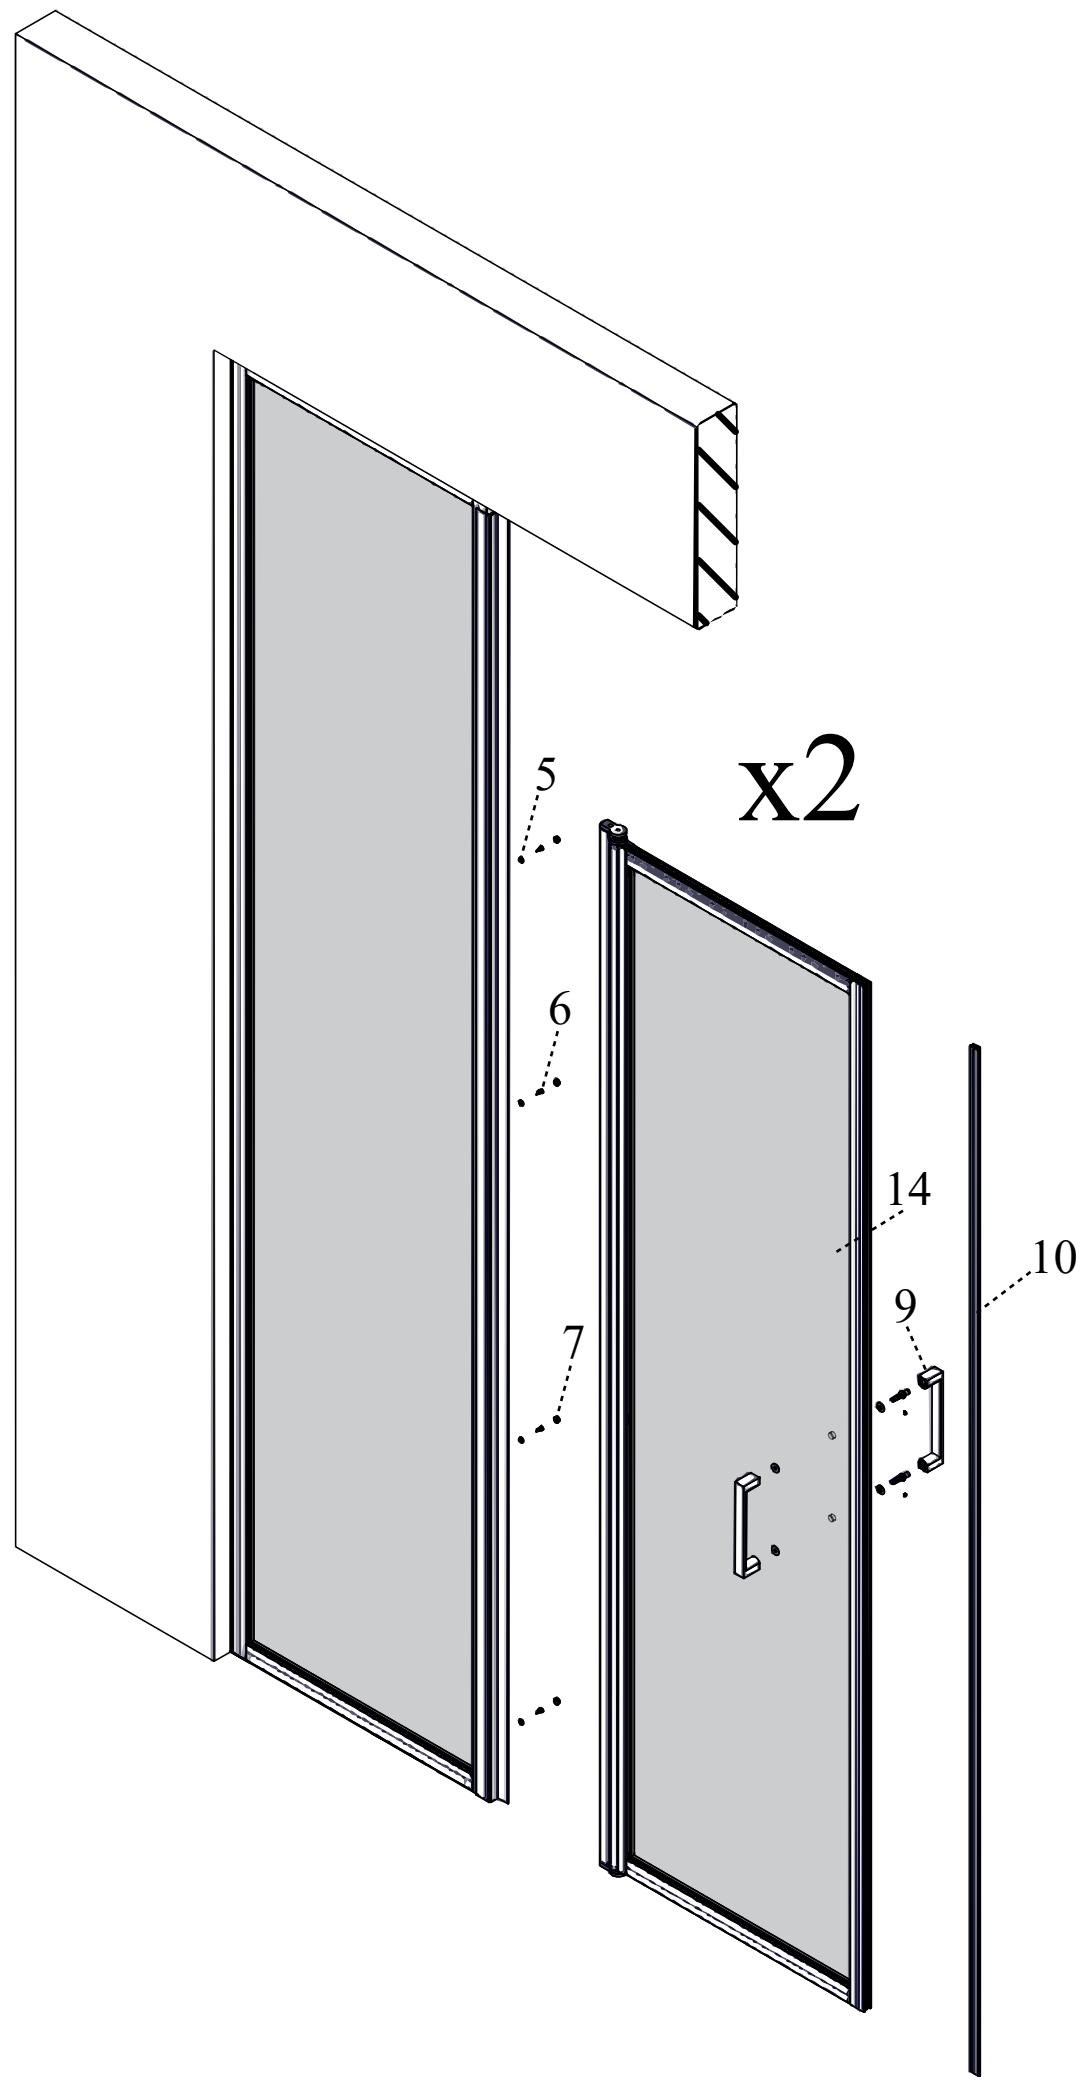


2.1

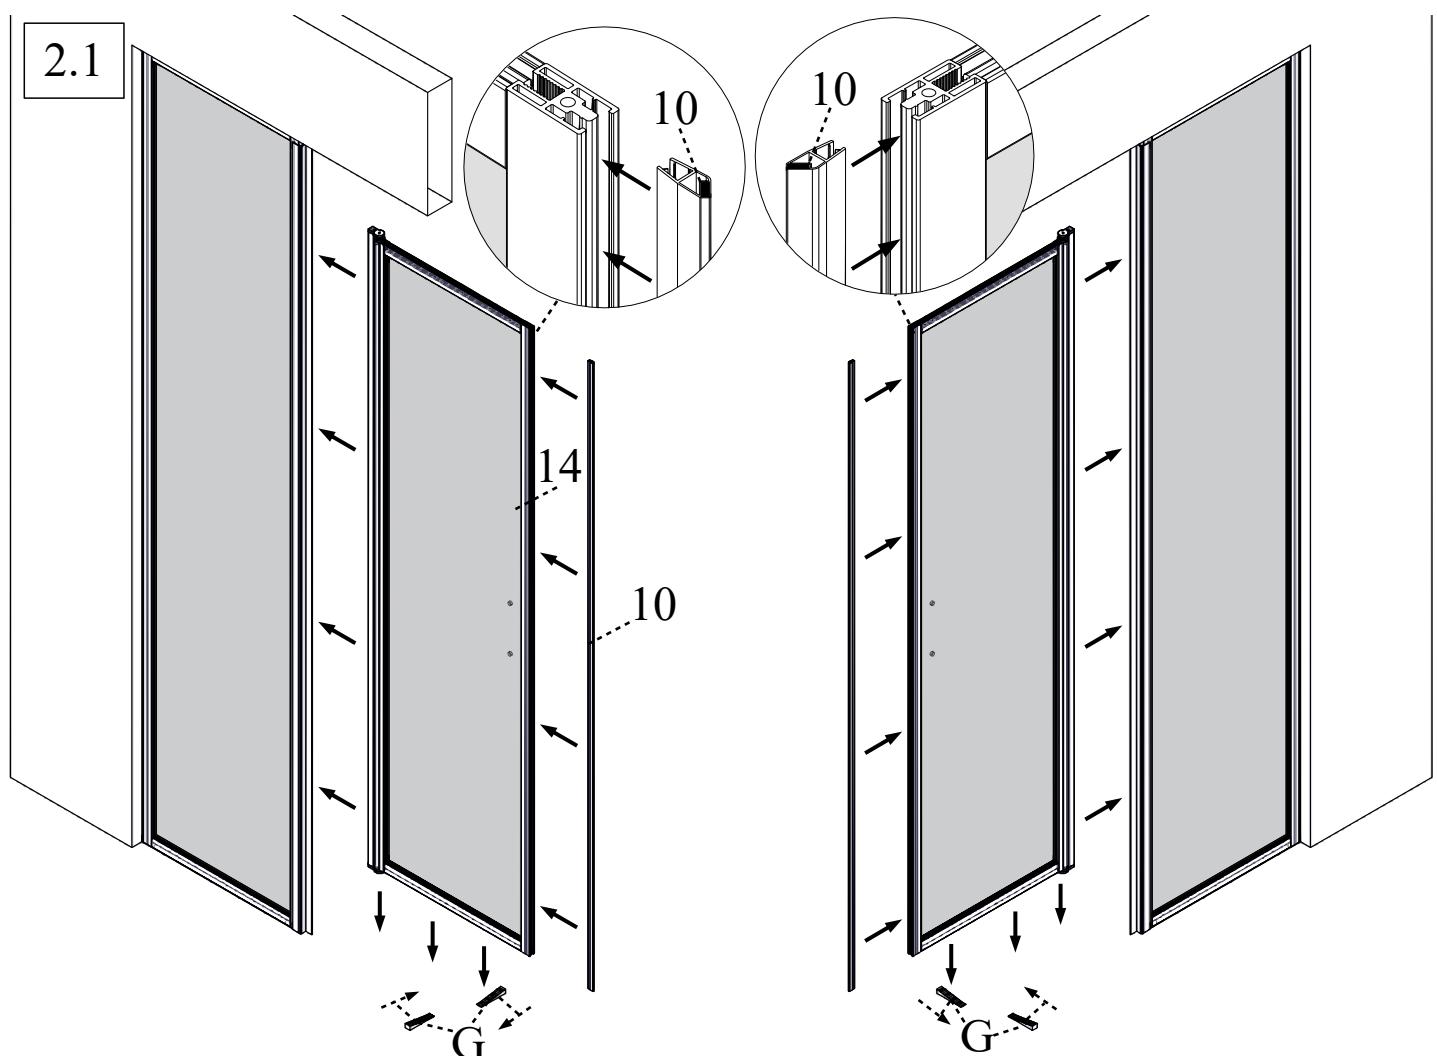


2.2

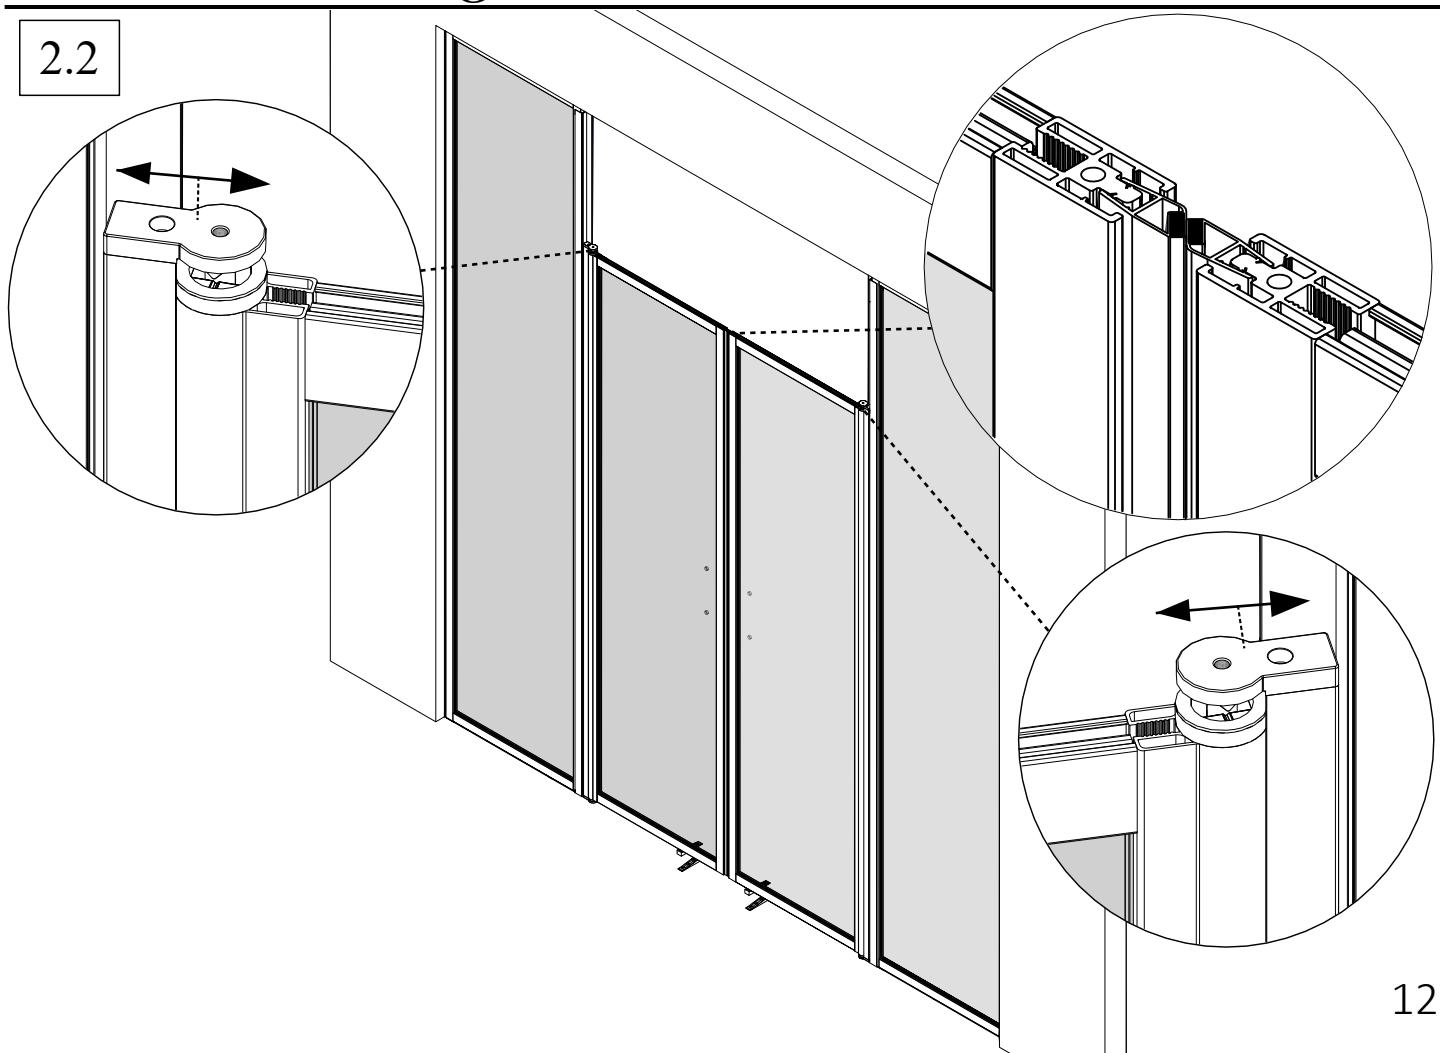

2.3

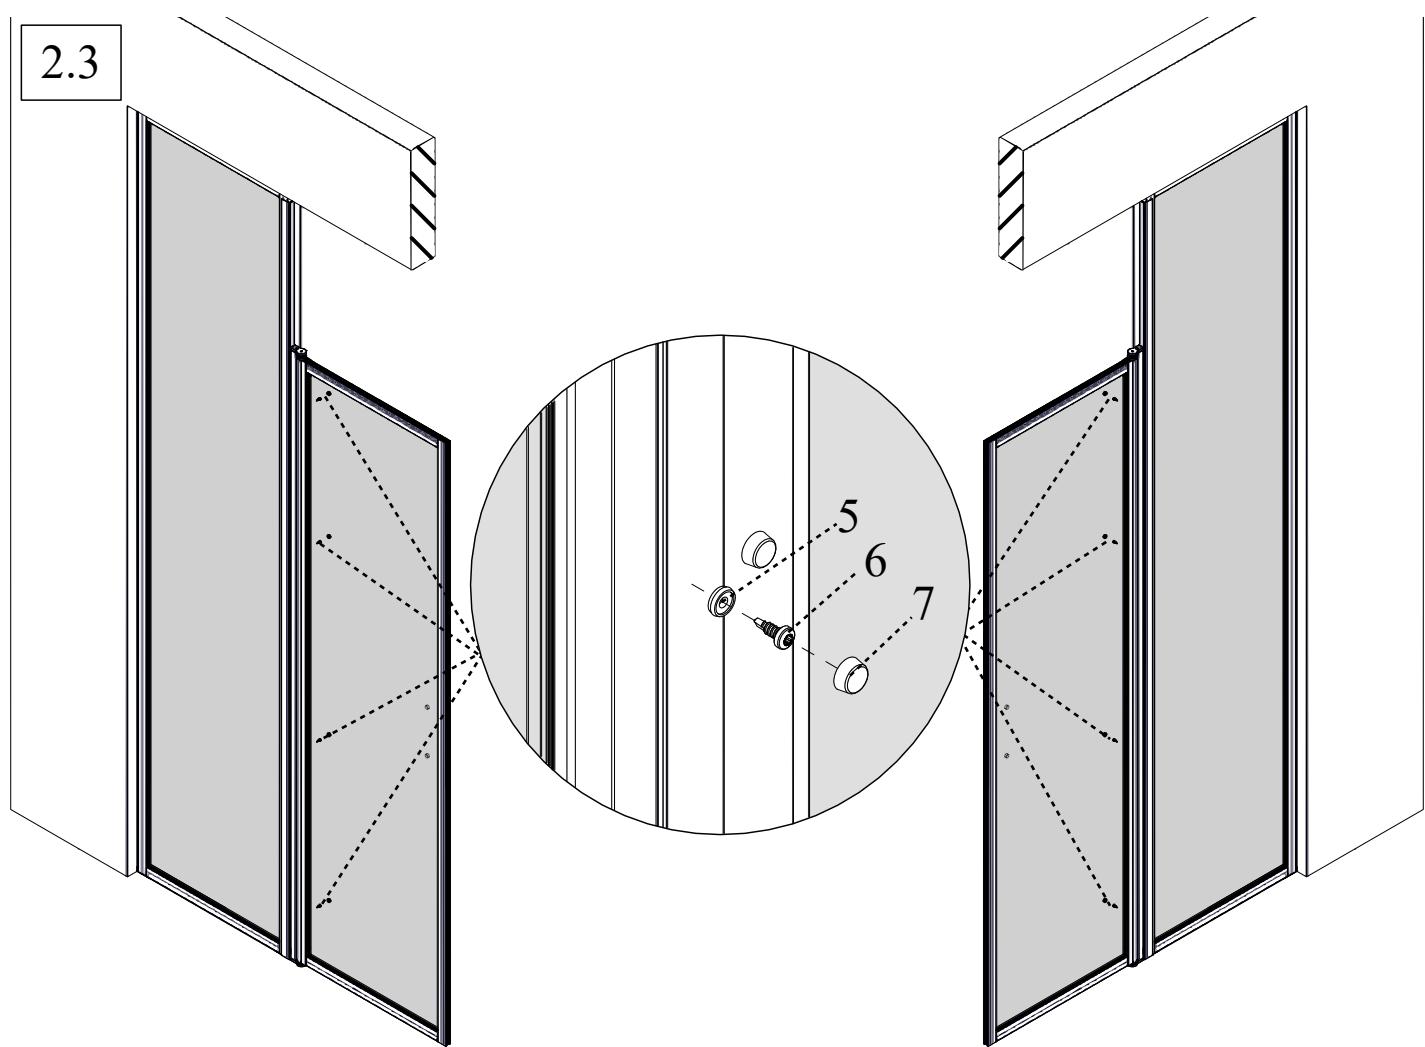


2.4

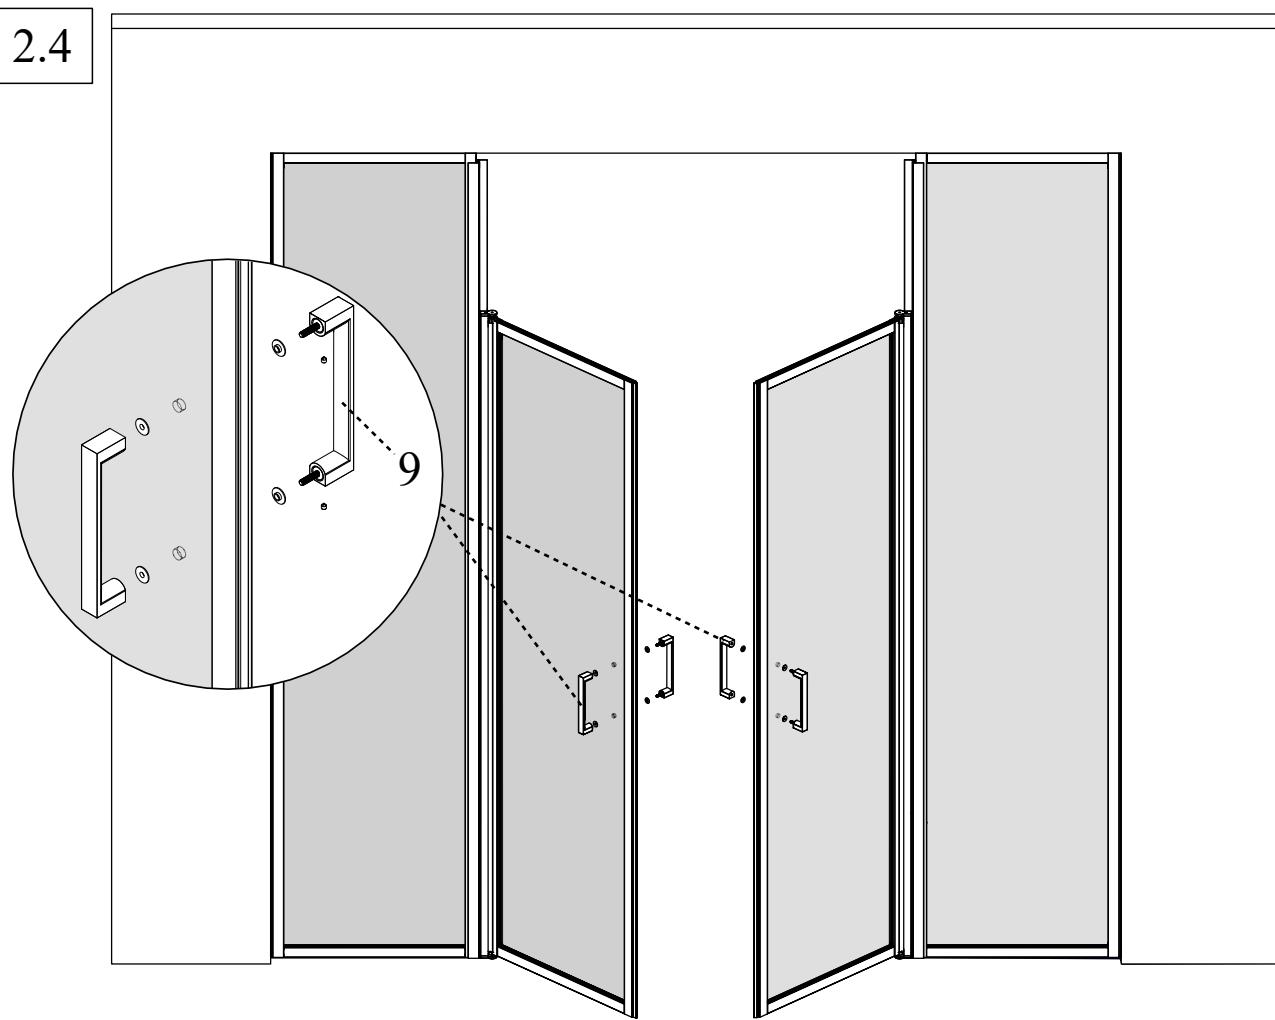


3/3


A)

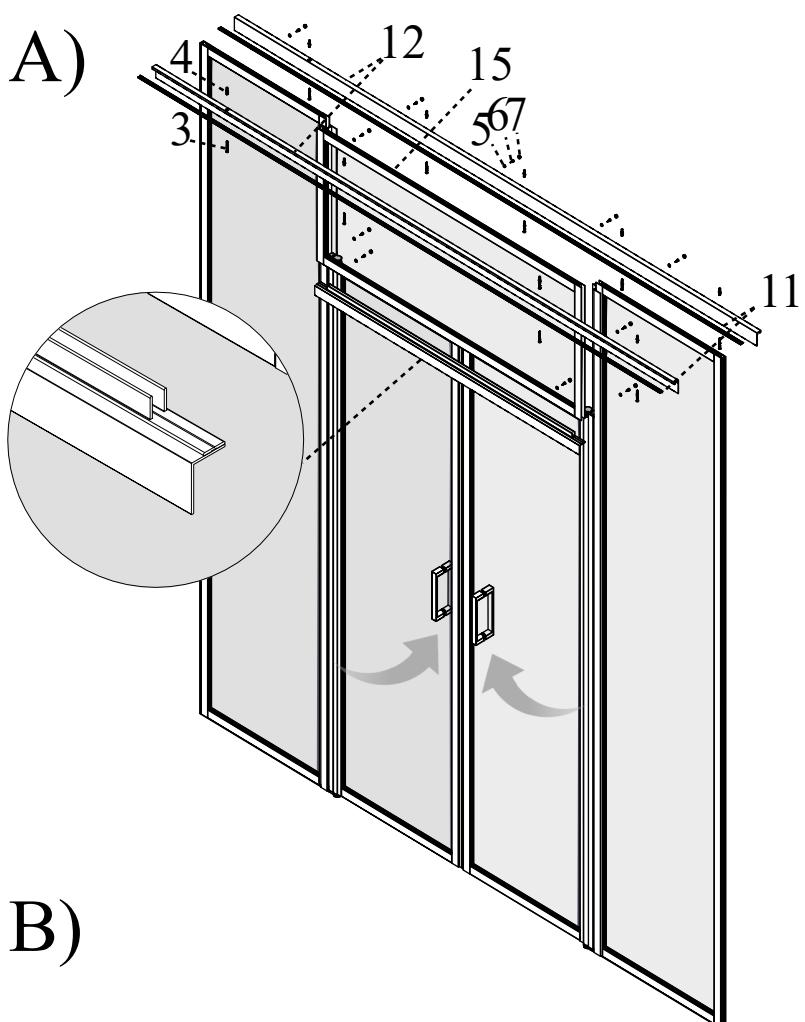


B)

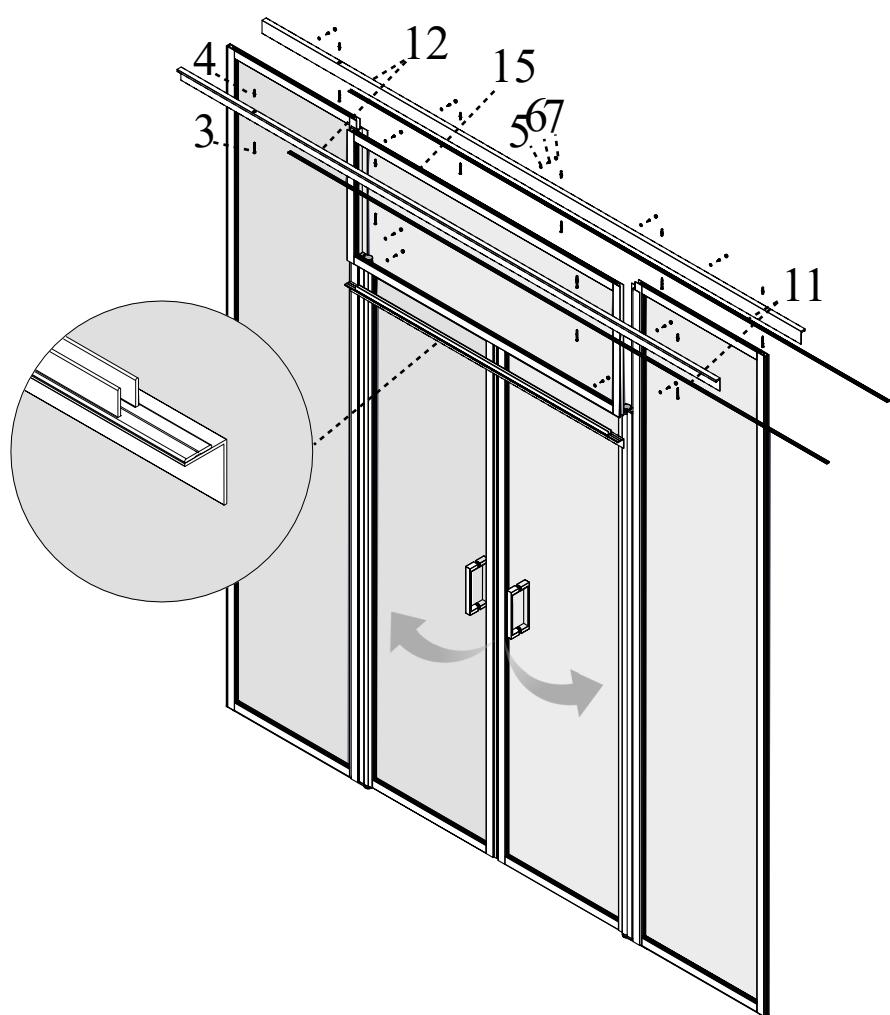


3.1

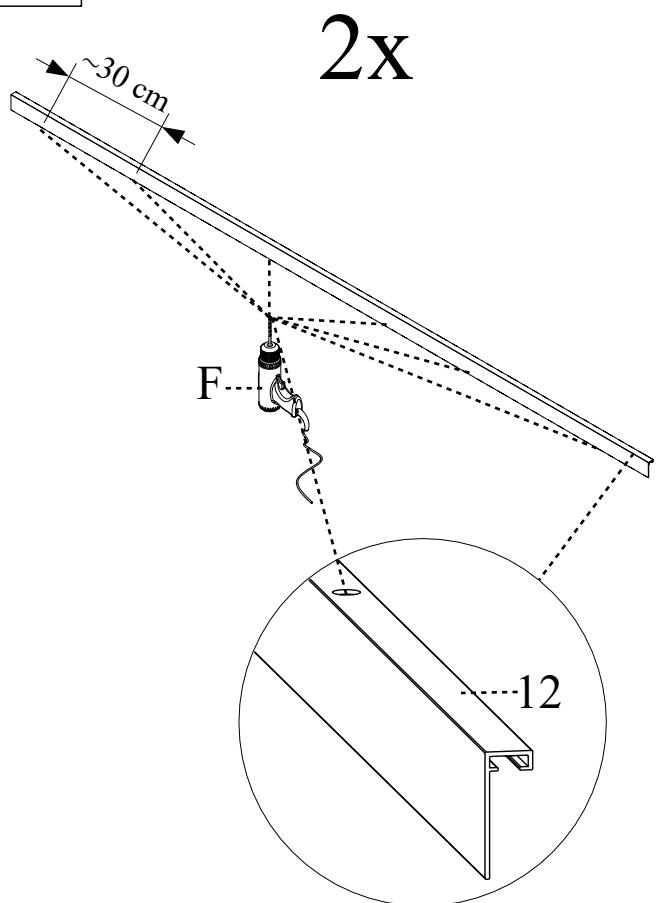


3.2

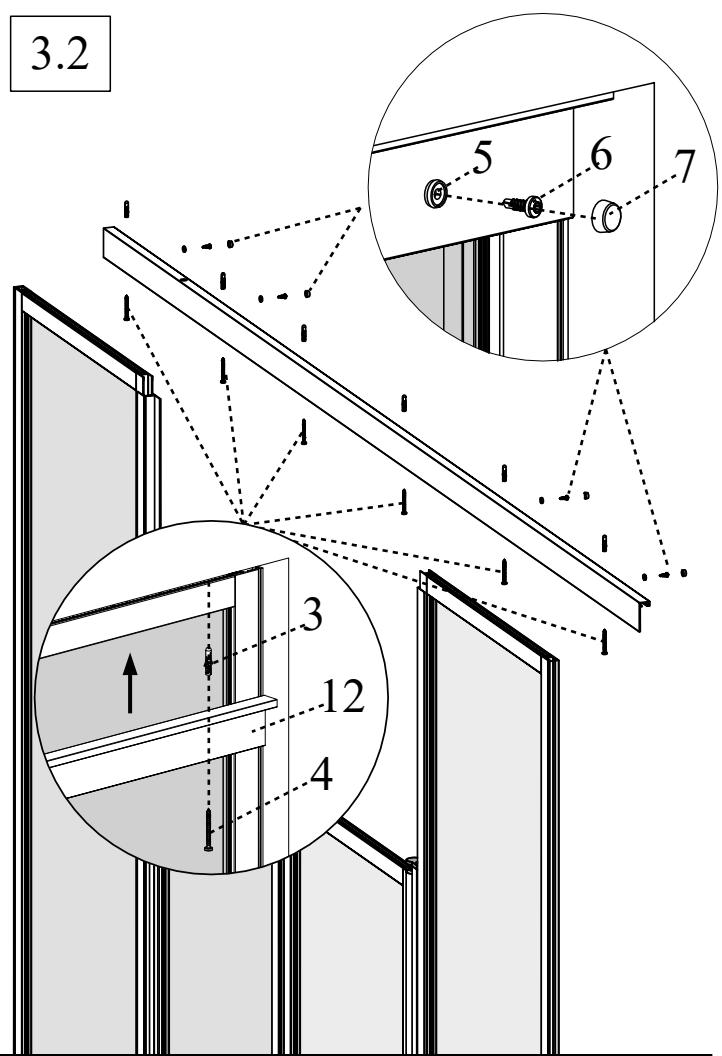



3.3

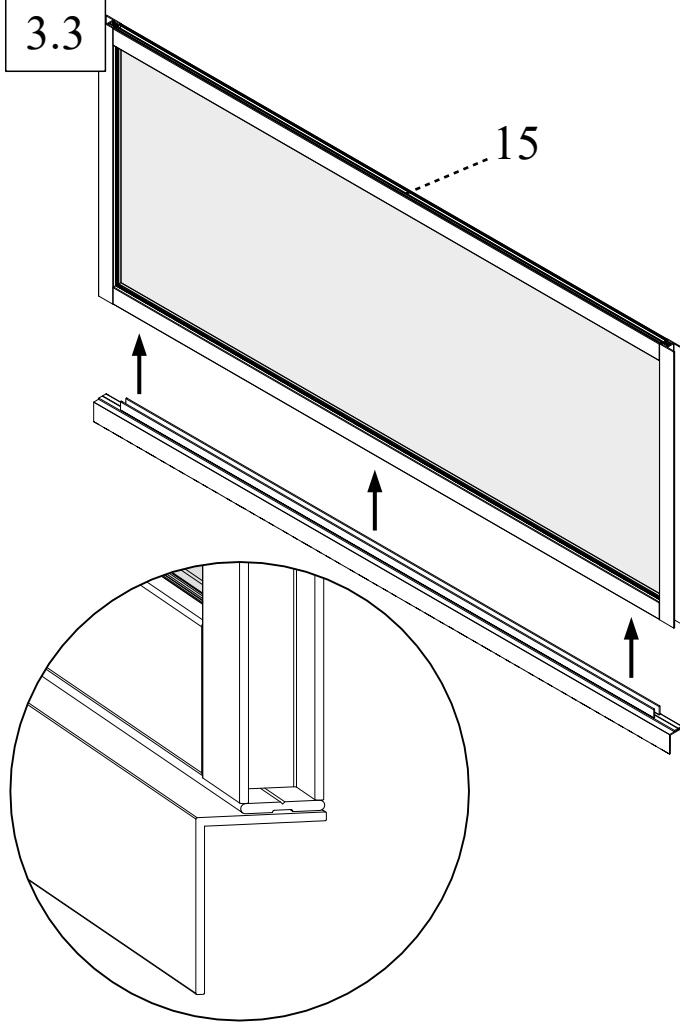


3.4

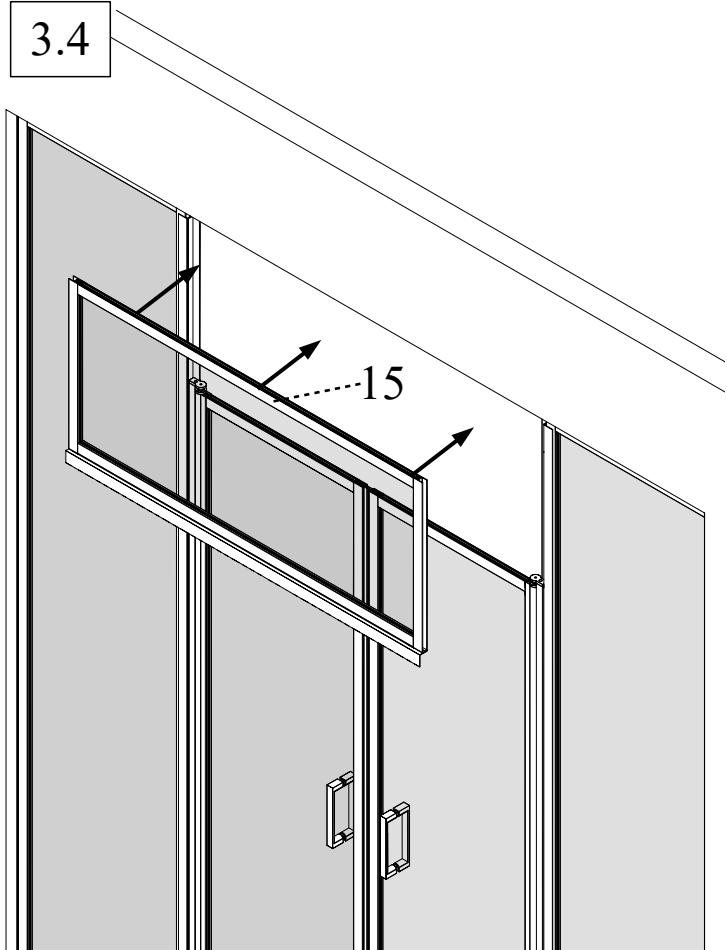




3.5

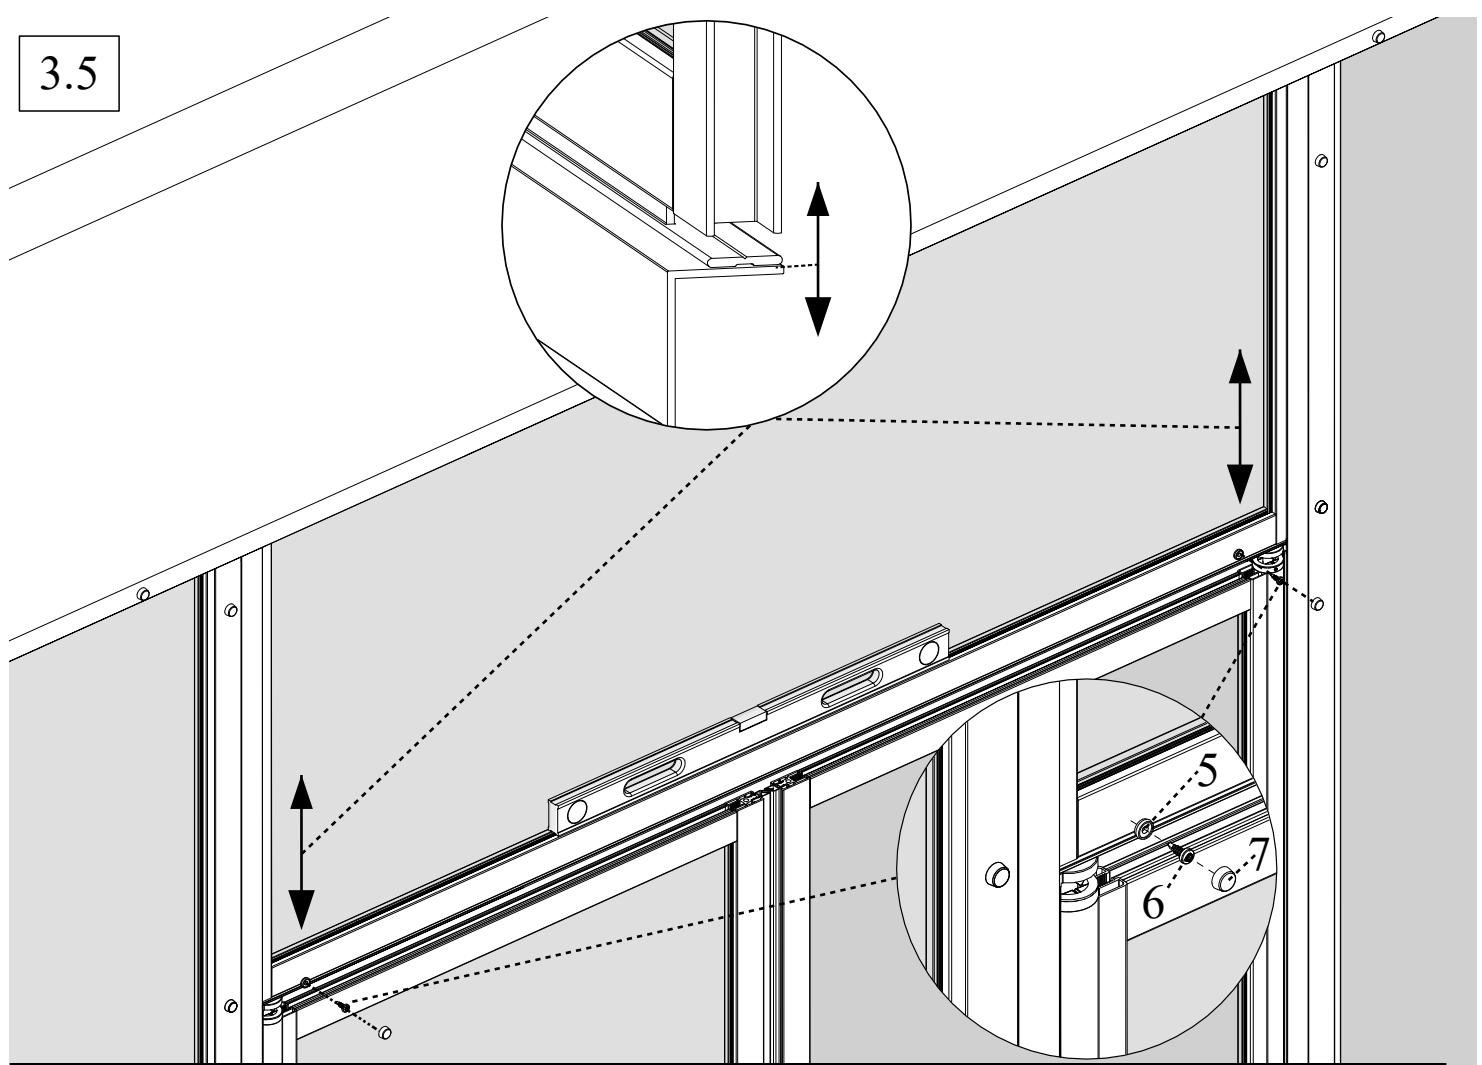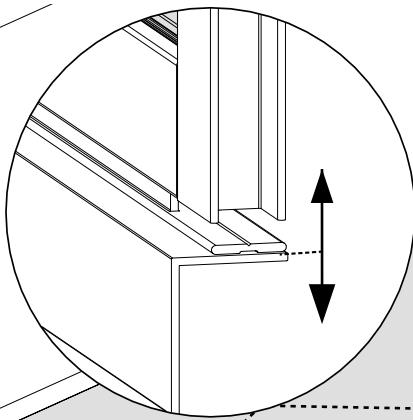


3.6

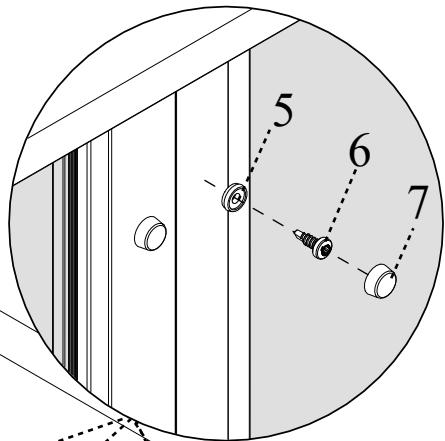

3.7

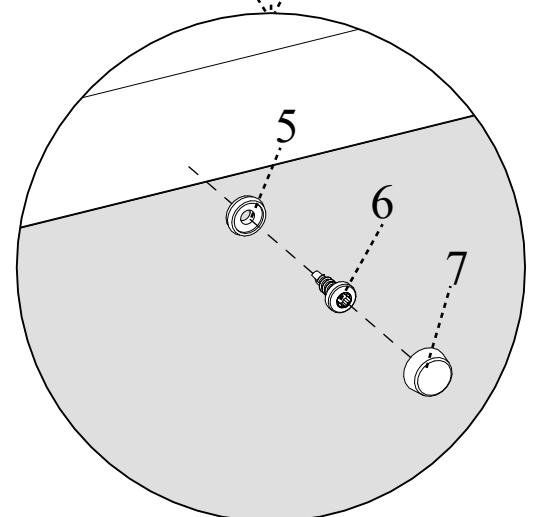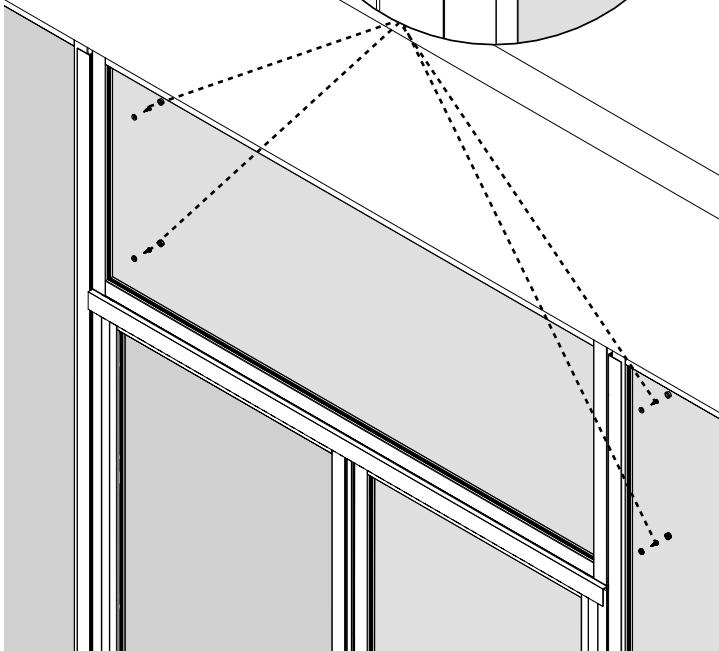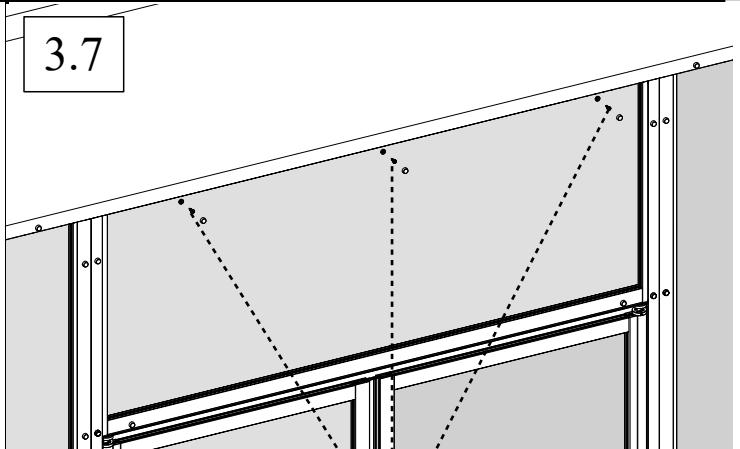

3.8

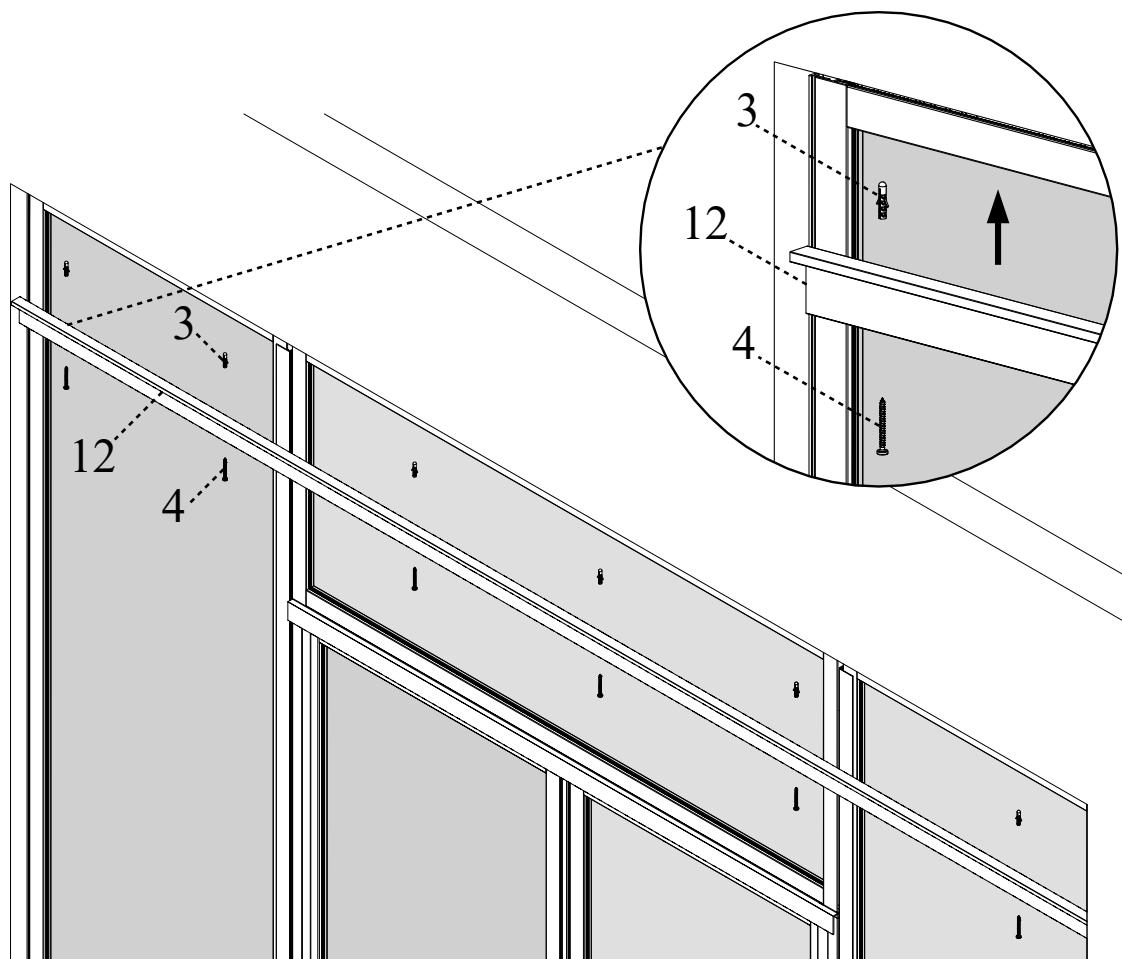

3.9

