





HIE TAKARI®




8/25 5FRLM


Blæk 875/876/877

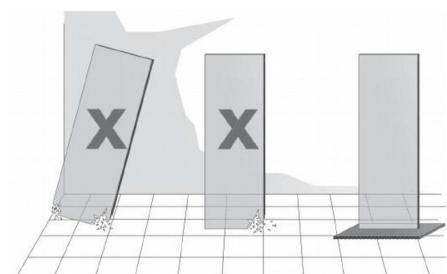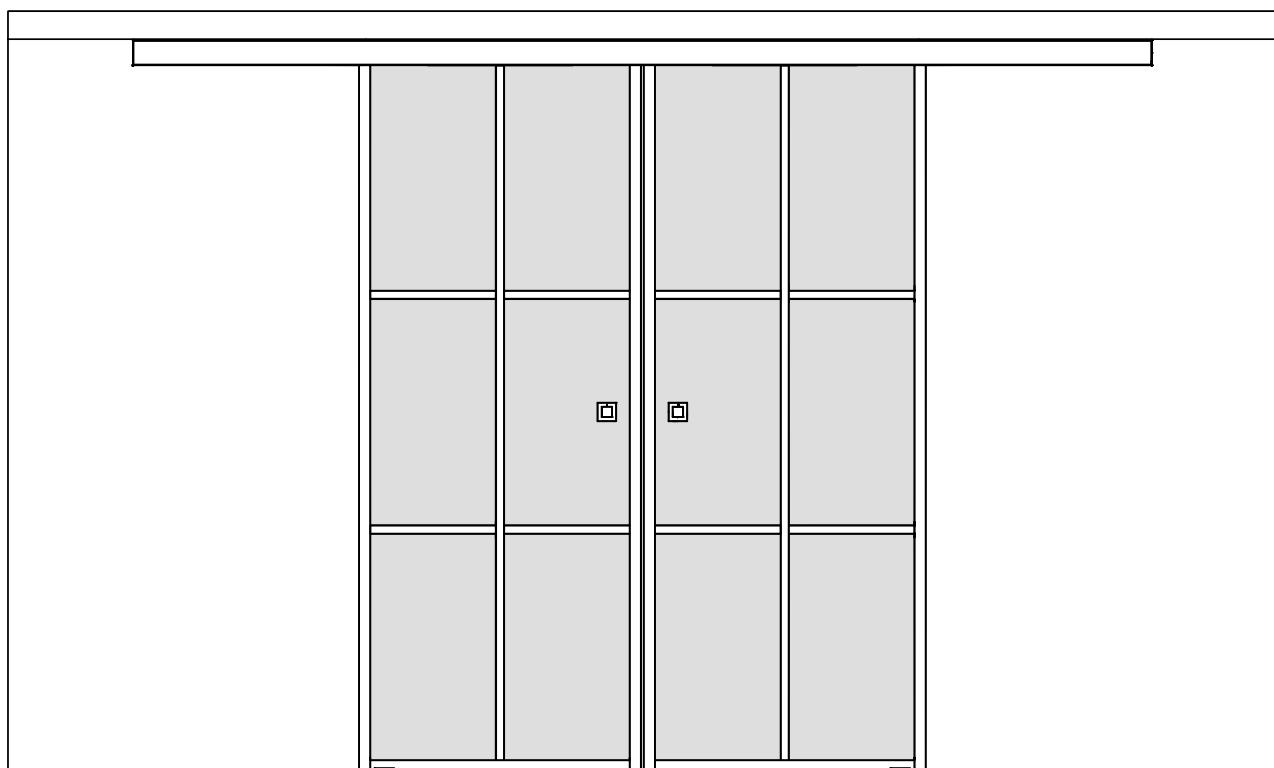


Parts

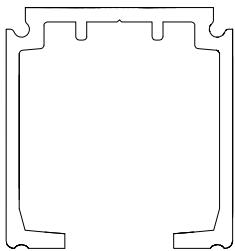


1. x1

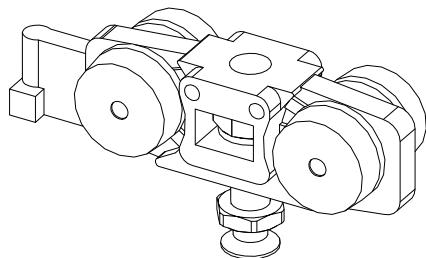


2. A x2
B x0

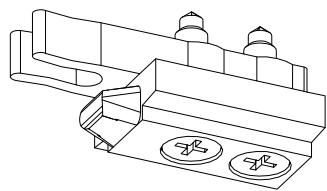


3. A x2
B x0

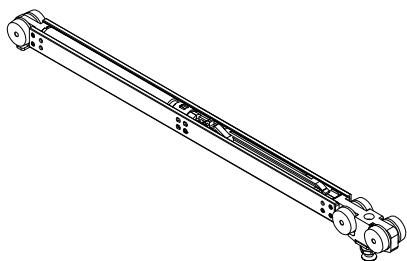

4. A x2
B x4

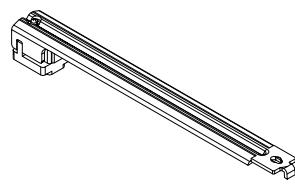


5. A x2
B x4

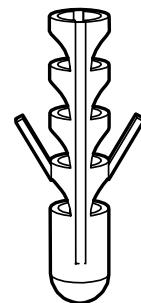


6. 6x30 mm 7. 3.5x39 mm




4/83 11RLM

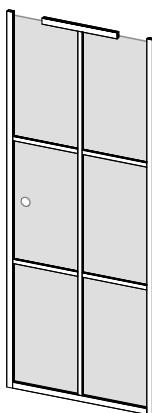


8. x2

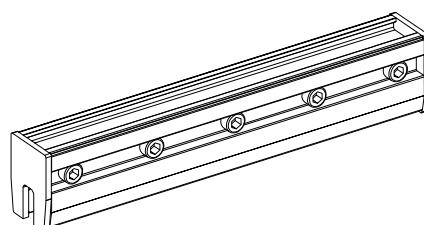


9. x4

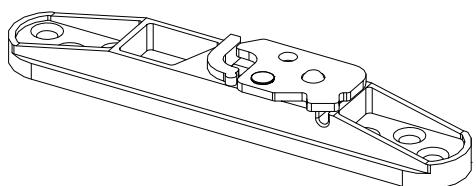


10. x4

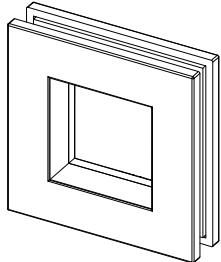


11. x2

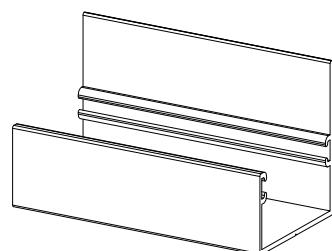

12. x2




13. x1

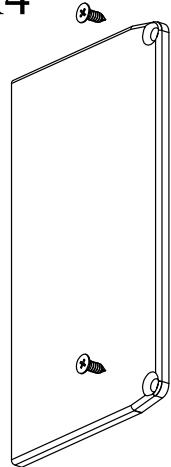

14 x2

Tools

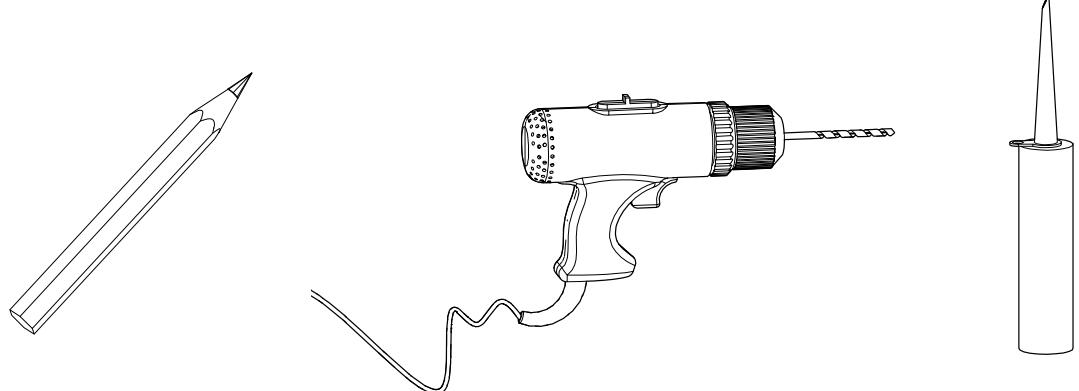

A

$\varnothing 6\text{ mm}$
B


C – Silicone
D – Glue




E



F

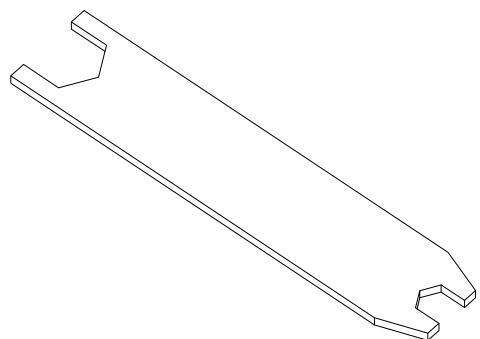


G

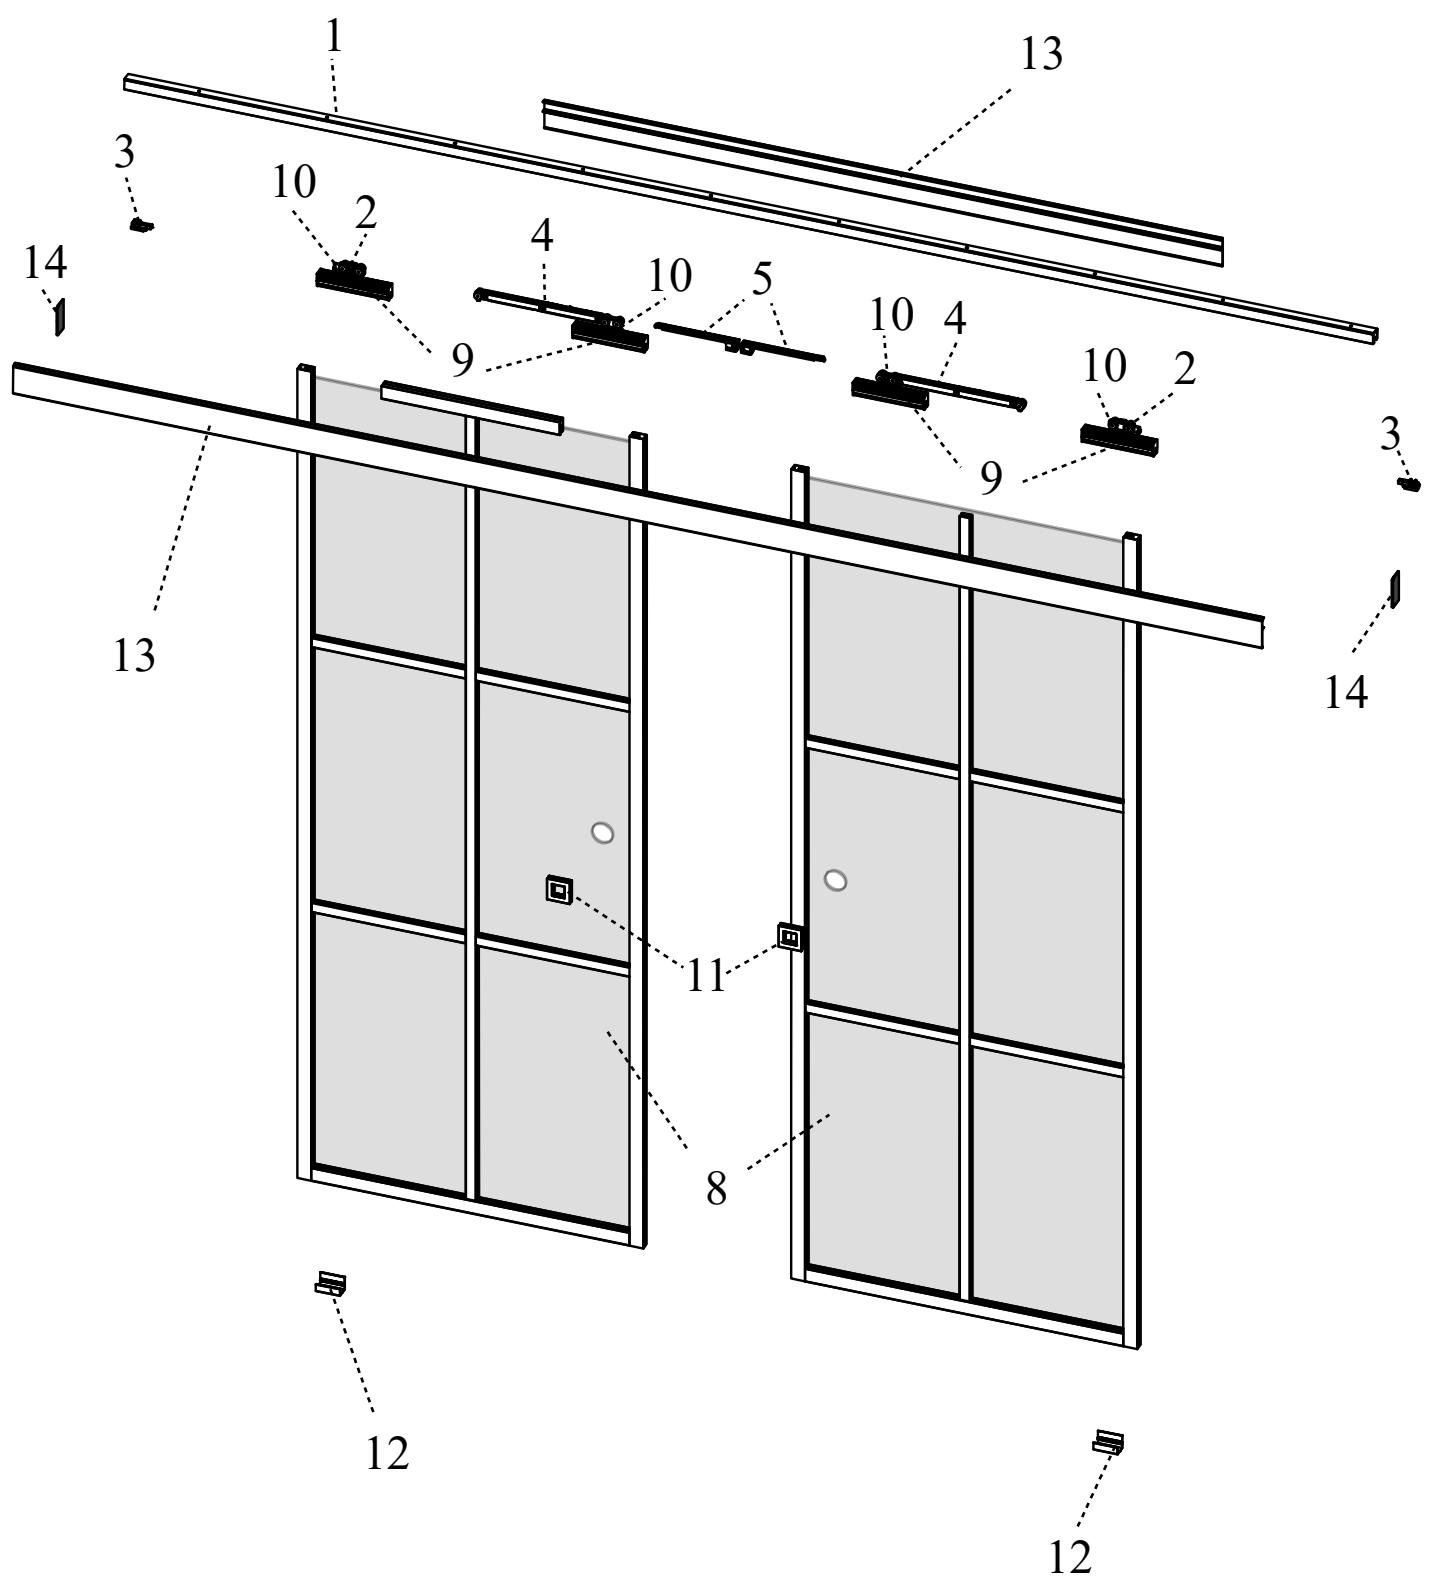


1


A

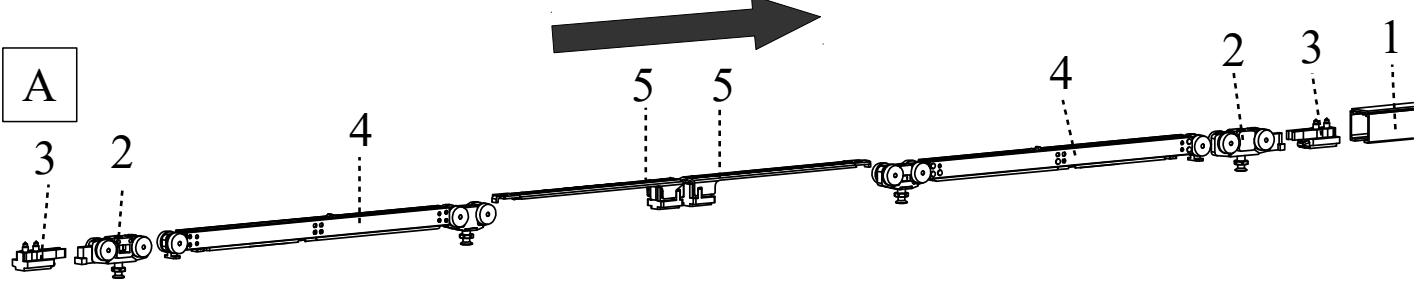


B

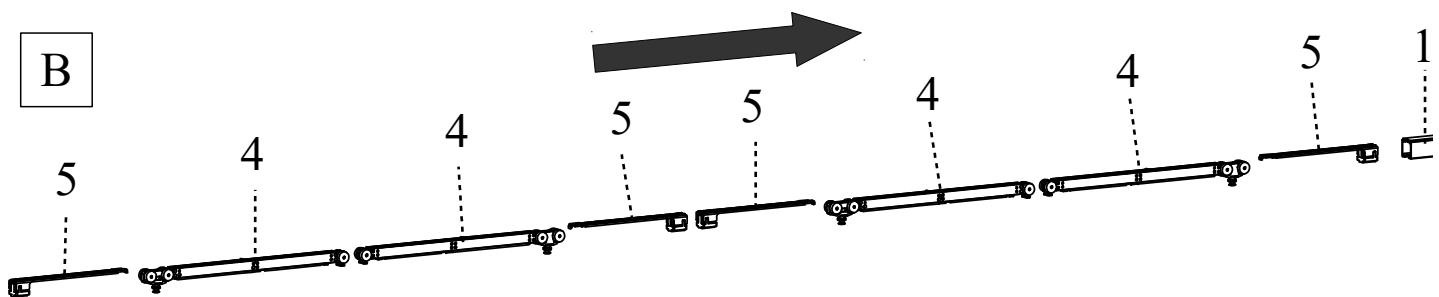



2

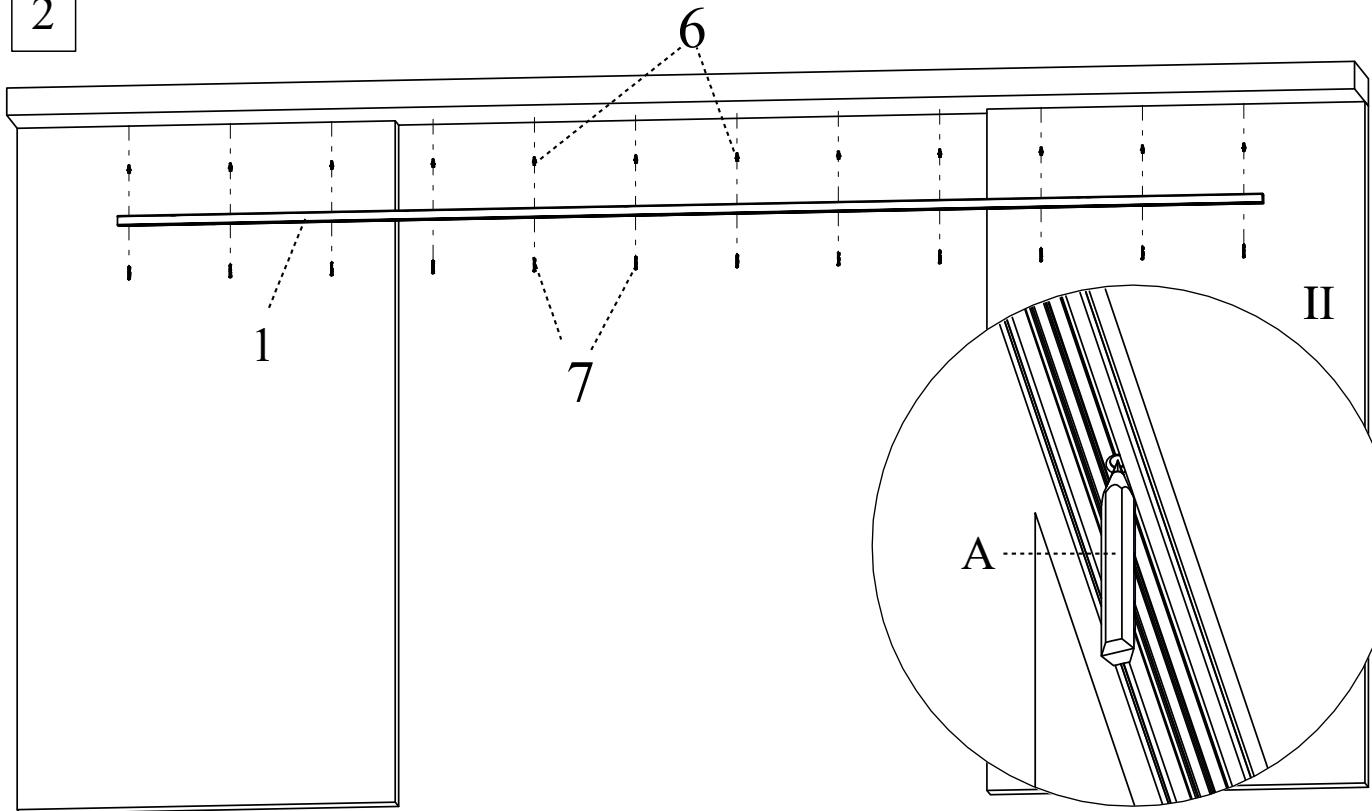

II



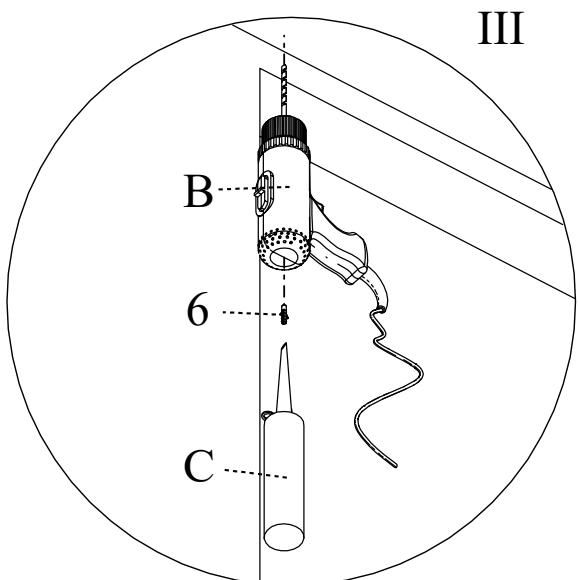


III




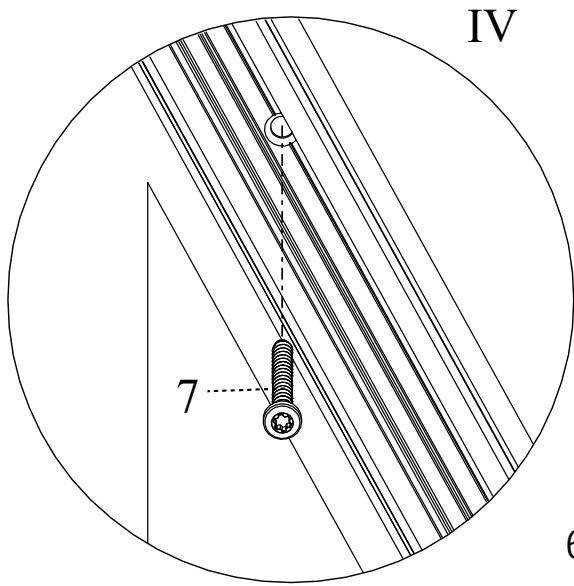
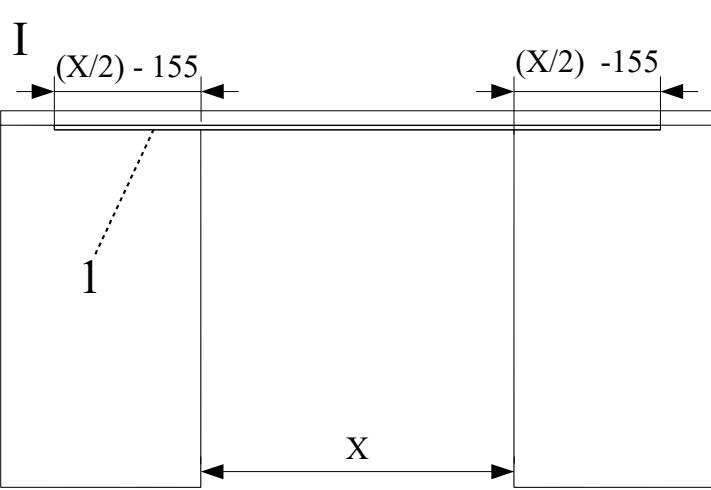


6

3

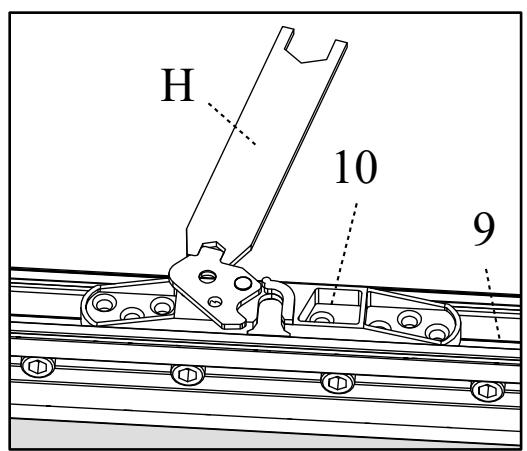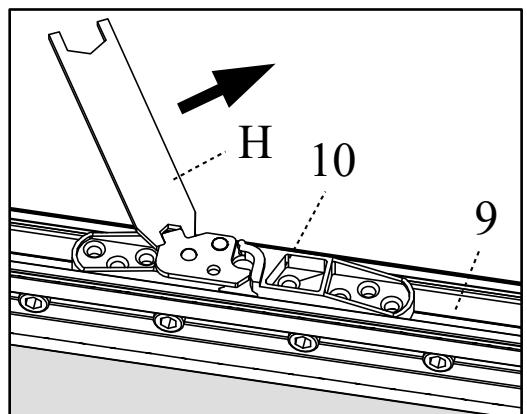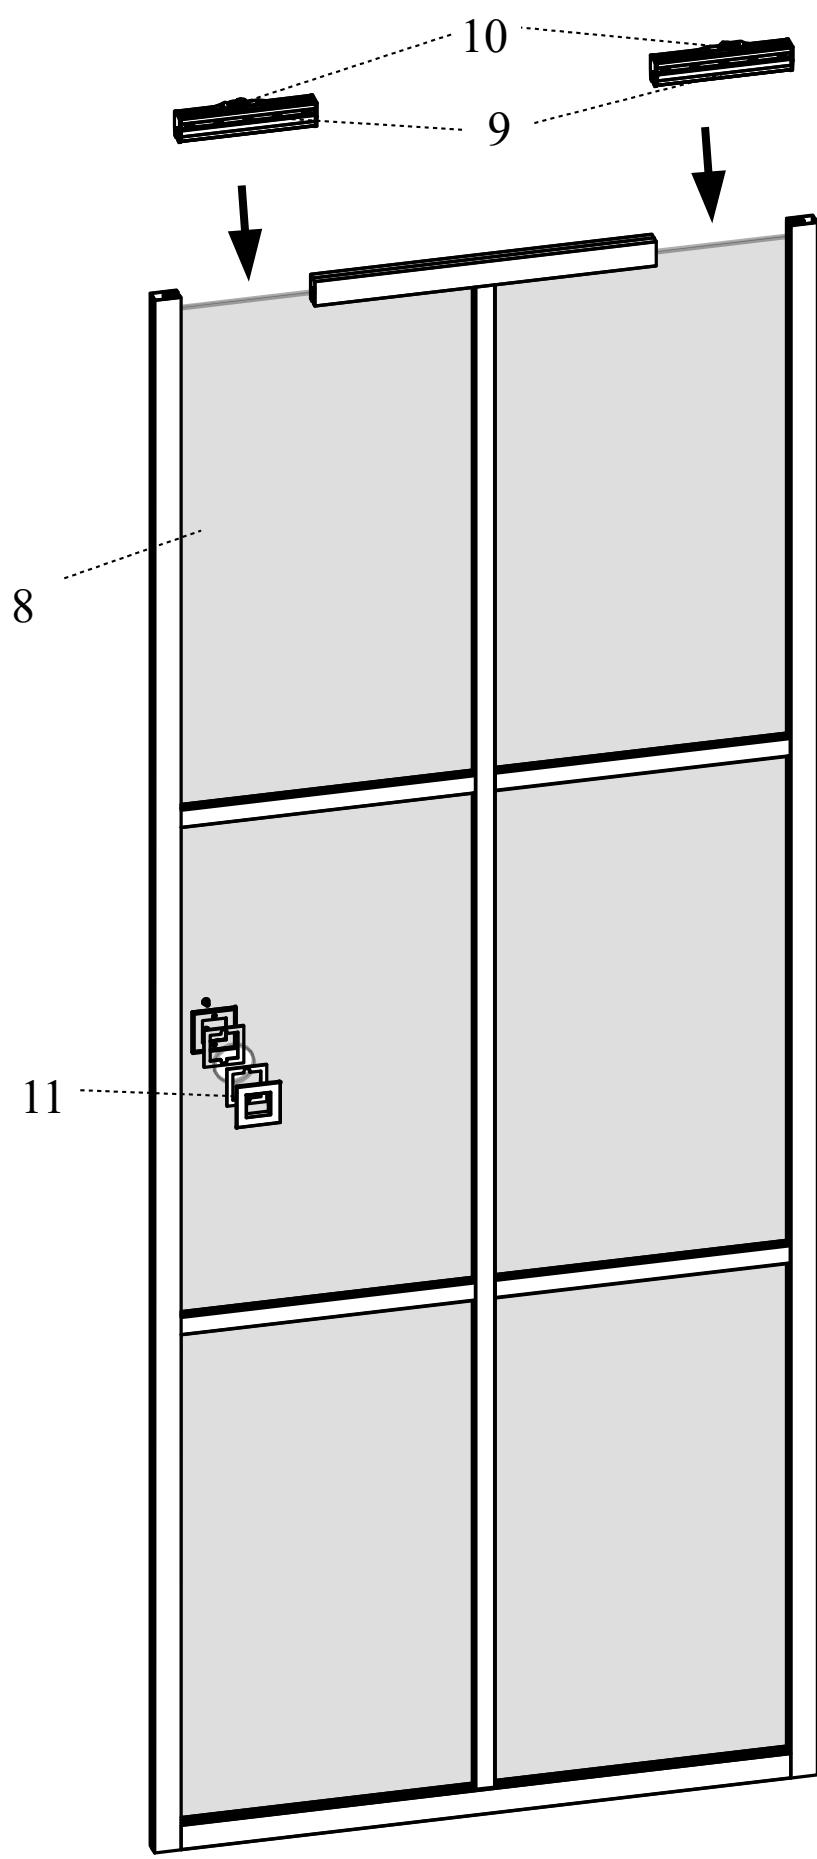

4

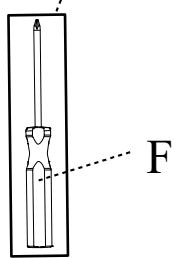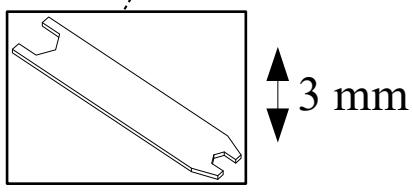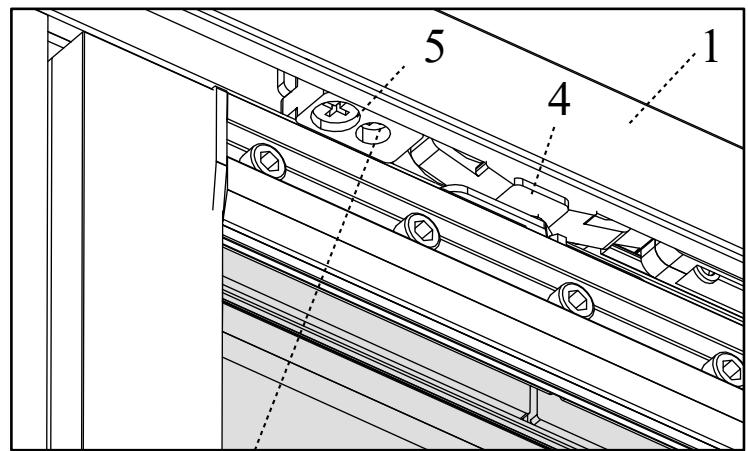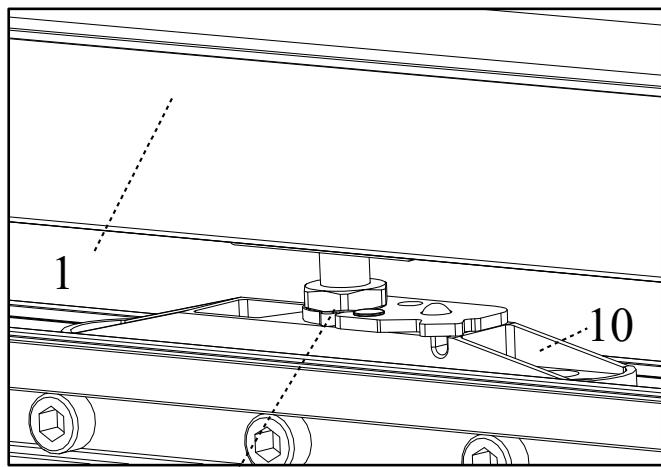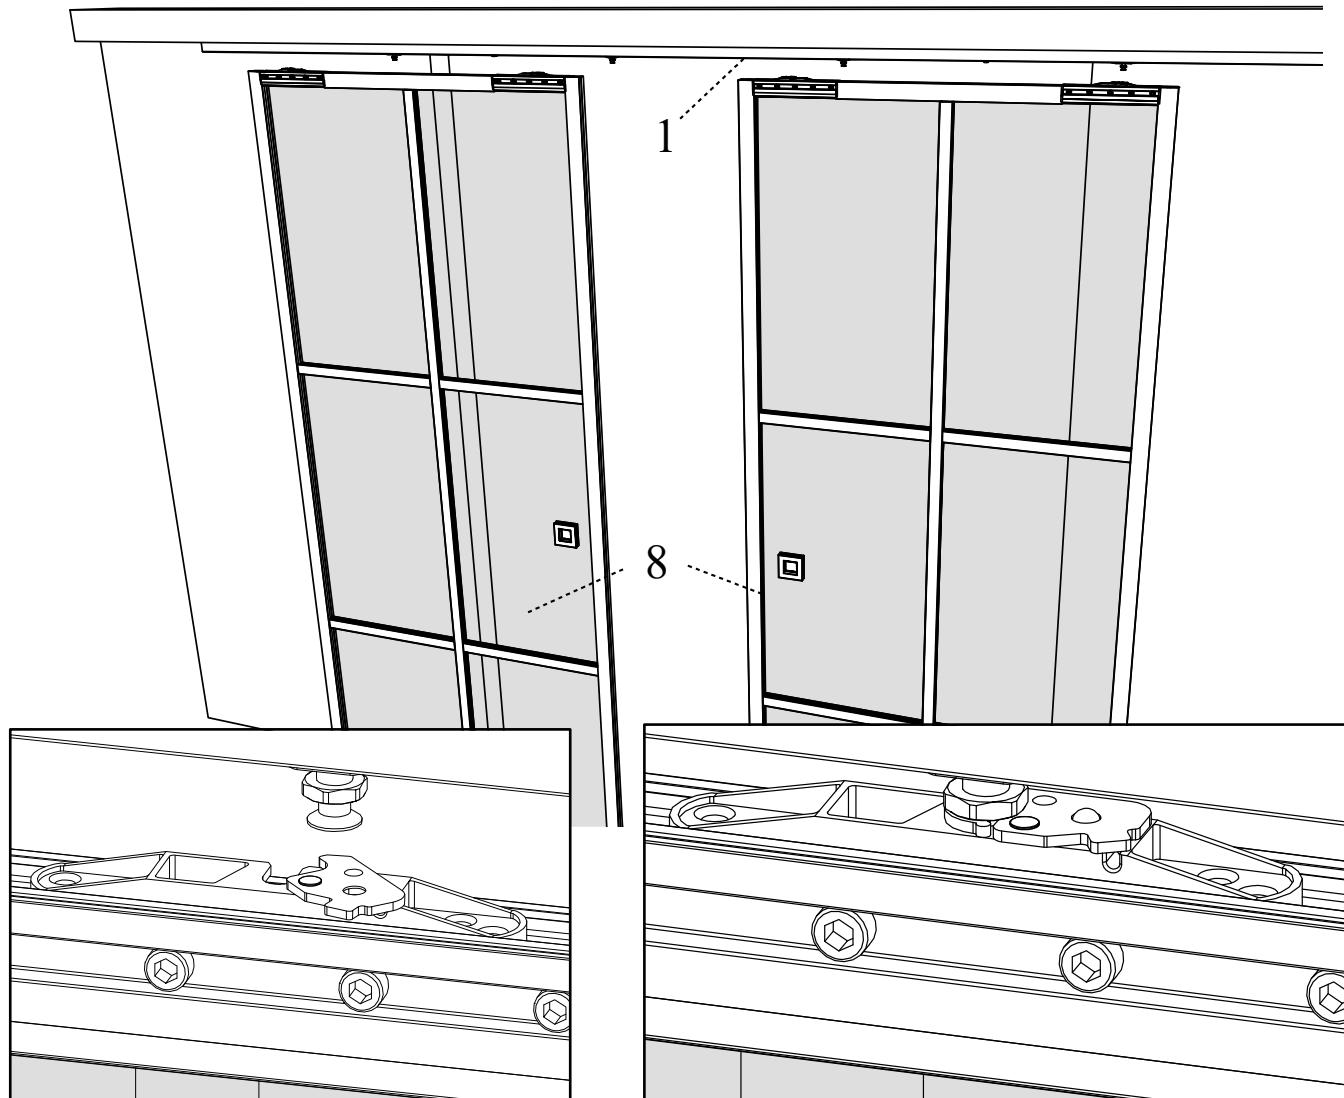

8

